
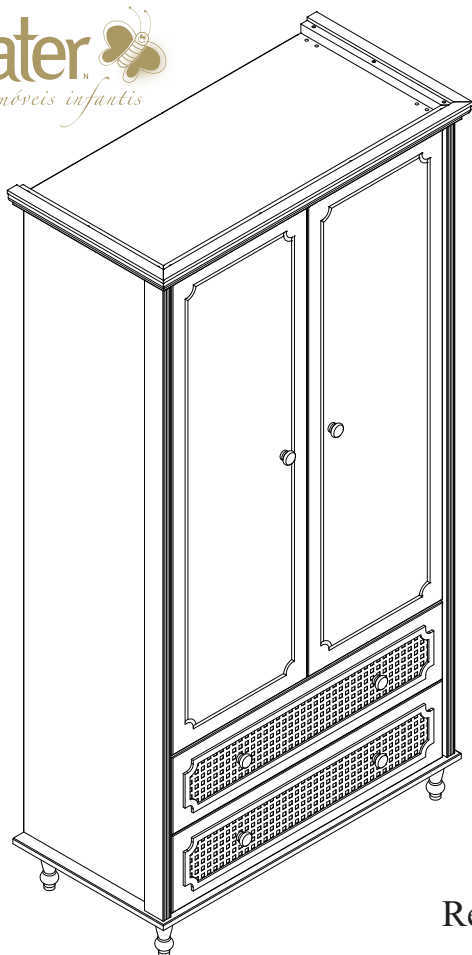






Ref. 890


A		02
B		01
C		06
D	 3,5x25 Flangeado	14
E	 4,0x35 Chata	06
F	 7,0x50 Cab 10	04
G	 350mm Peças	04
H		01
I	 4,0x12 Chata	16
J	 ø35	06
K		06

L		04
M	 4,0x12	18
N	 8x30	32
O		02
P	 8x5	04
Q	 7,0x50 Cab13	08
R		01
S		16
T		16
U	 6,0x12	12
V	 8x8	70



Nº Peça	Nome da Peça	Qtde
1	Lateral Direita	01
2	Lateral Esquerda	01
3	Prateleira Móvel	01
4	Tampo Montado	01
5	Fundo	01
6	Frente Gaveta	02
7	Porta	02
8	Vista Lateral	02
9	Travessa Gaveta	02
10	Prateleira Maior Fixa	02
11	Traseiro	02
12	Lateral Gaveta	04
13	Traseiro Gaveta	02
14	Fundo Gaveta	02

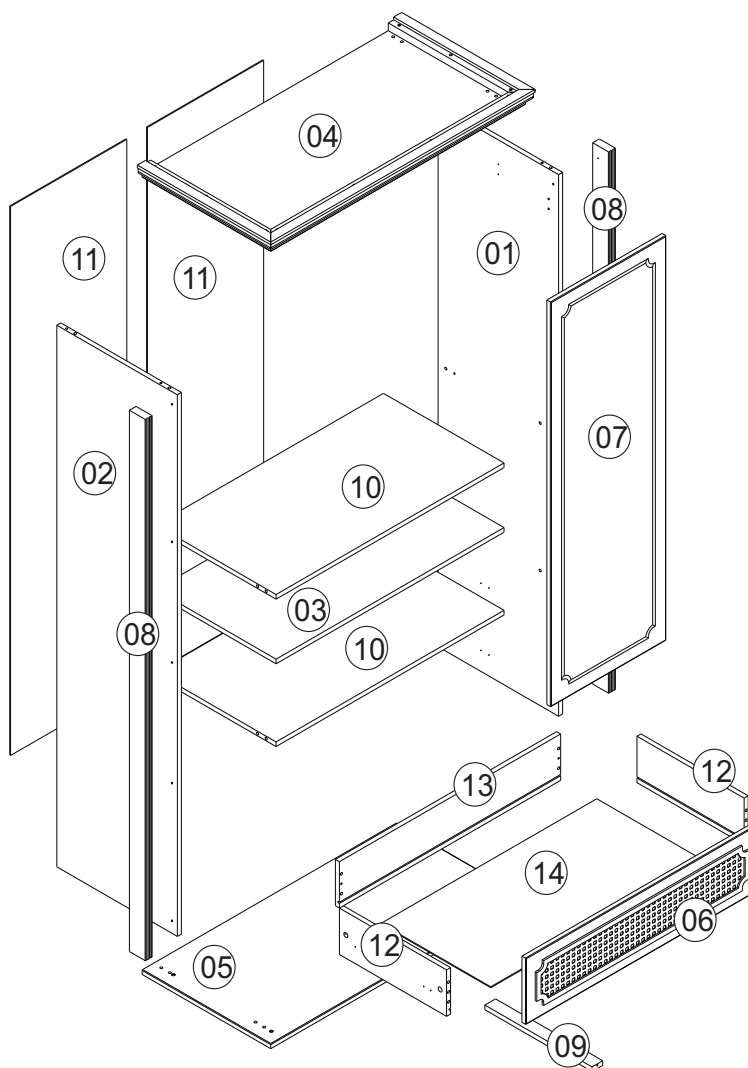


01

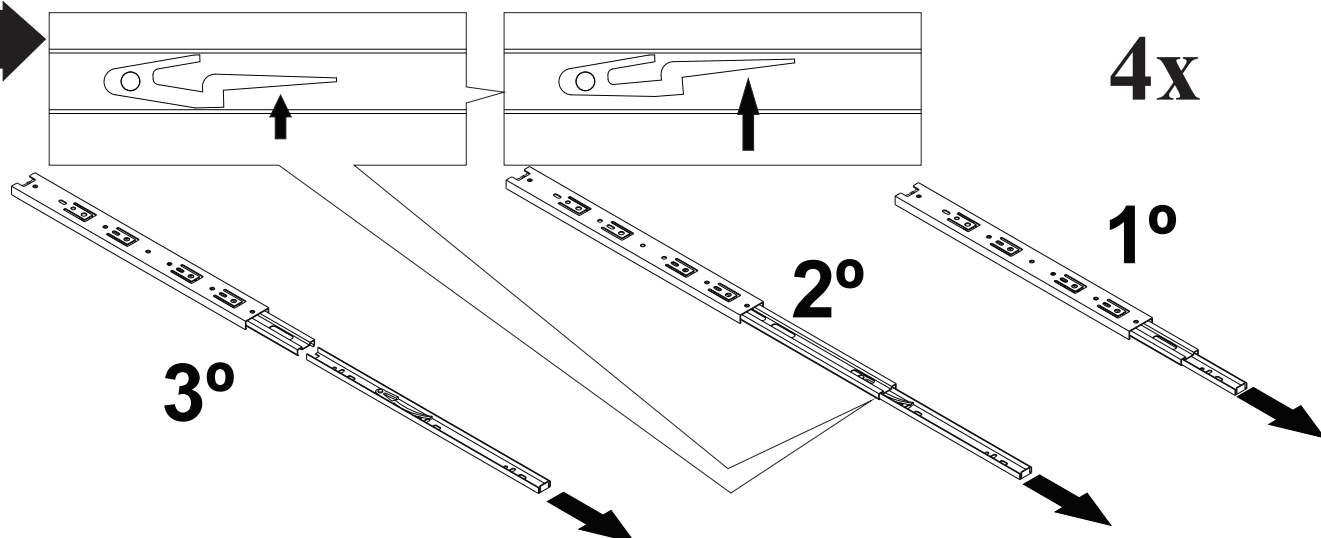


02

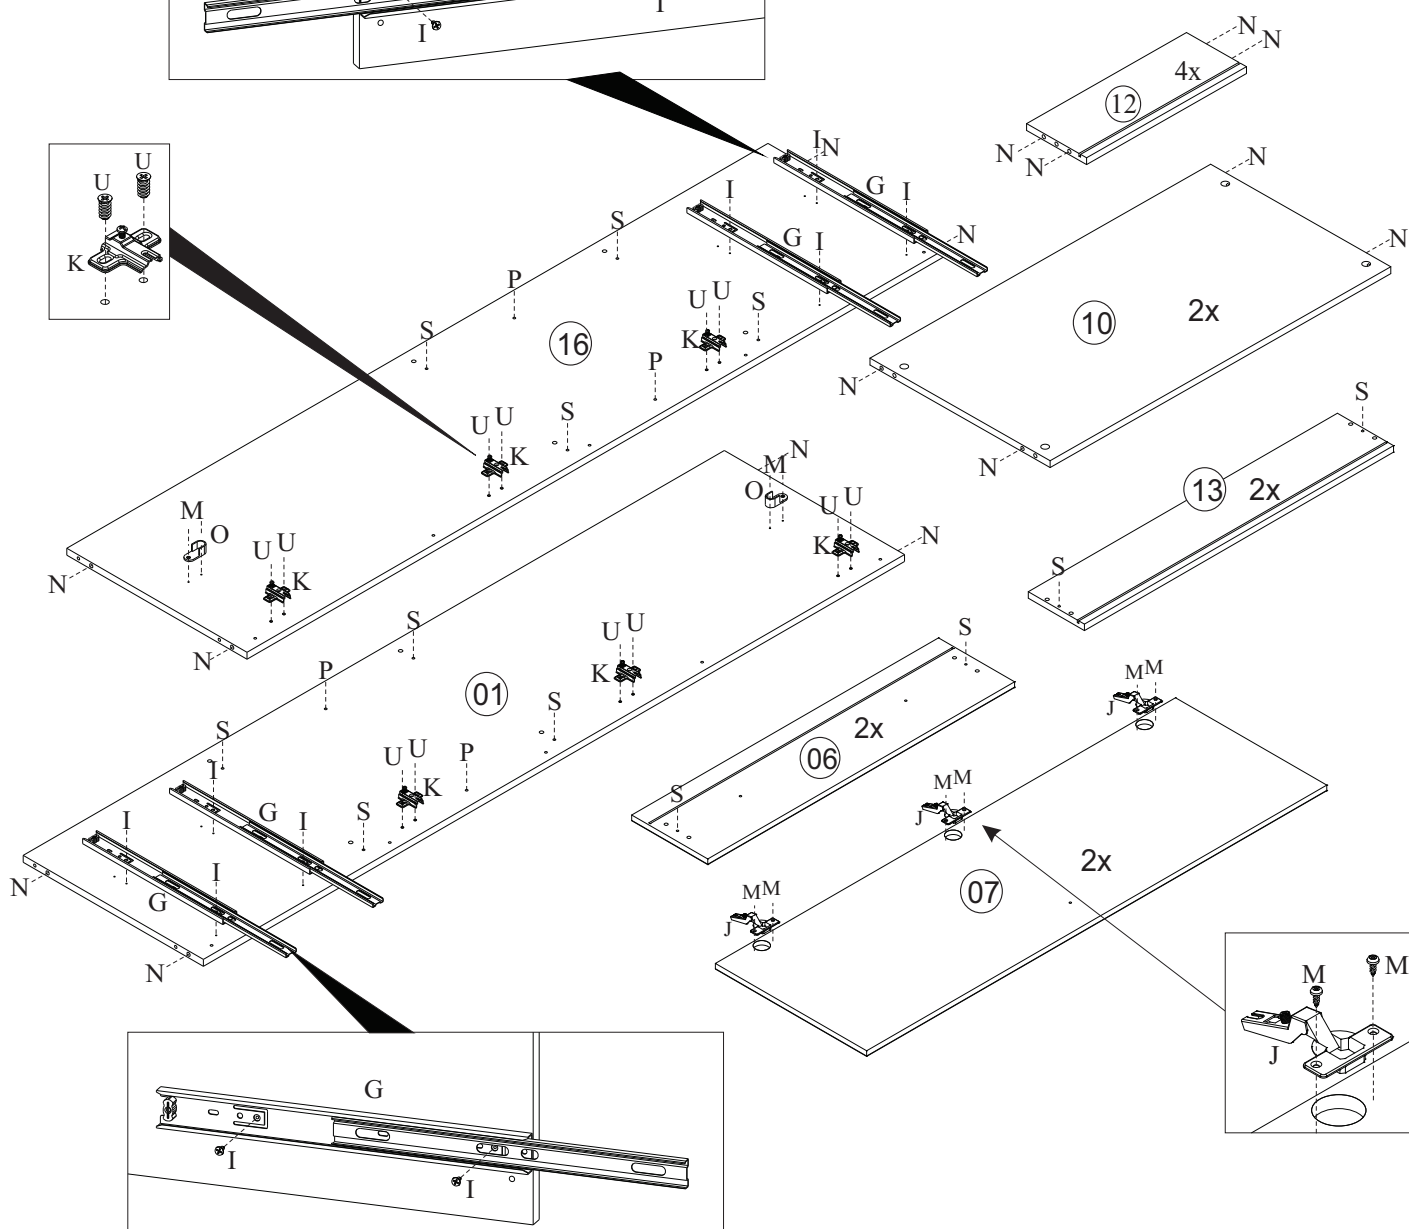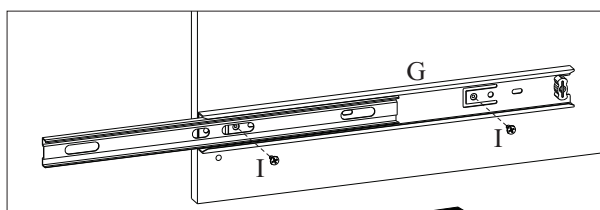

03 → **2x**


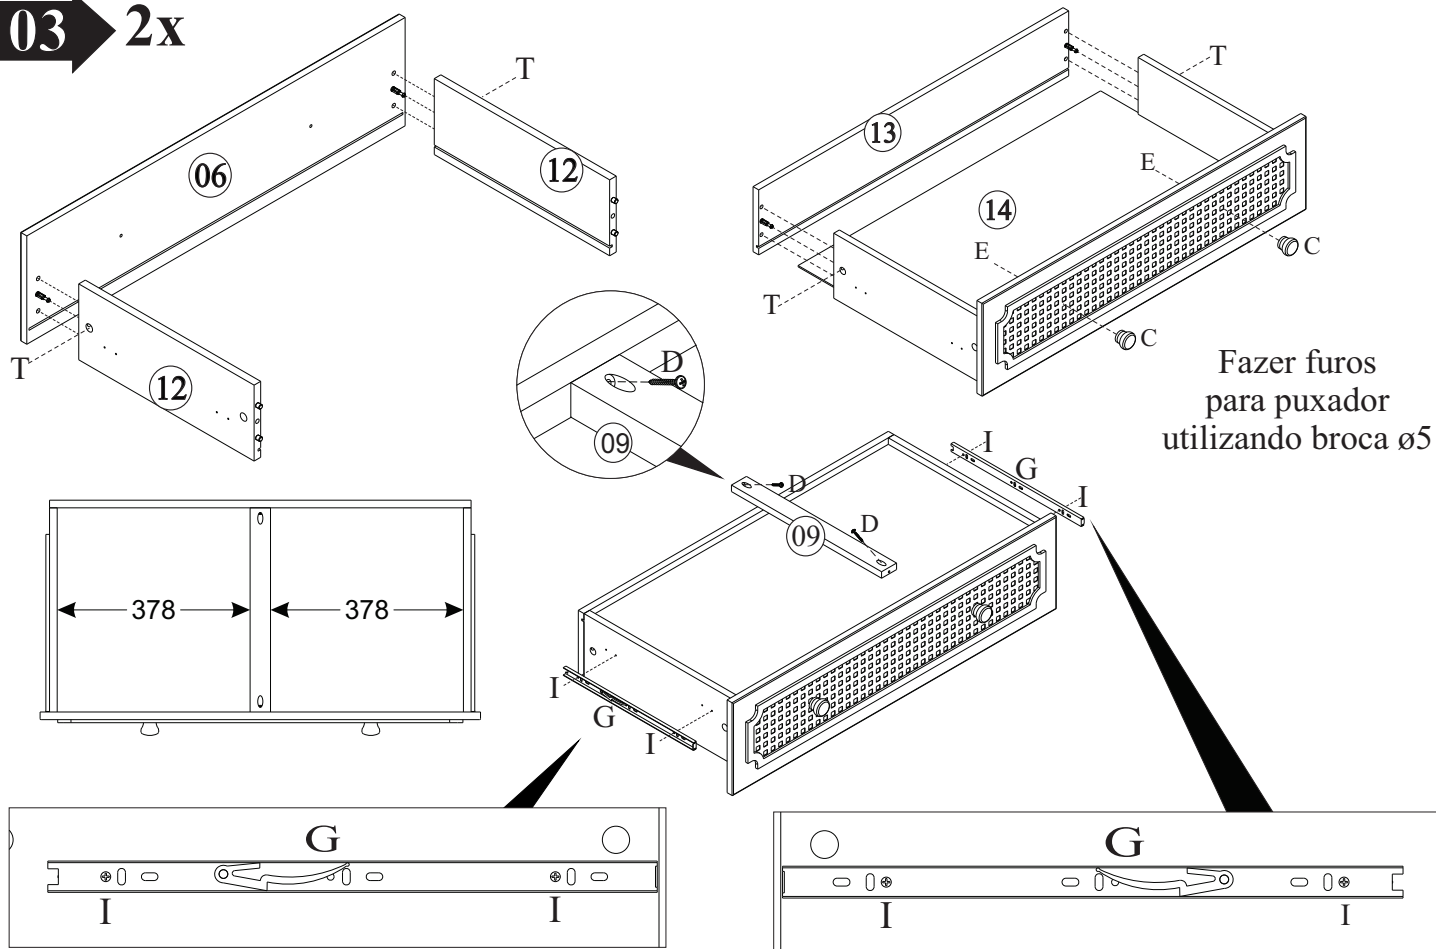


04 →

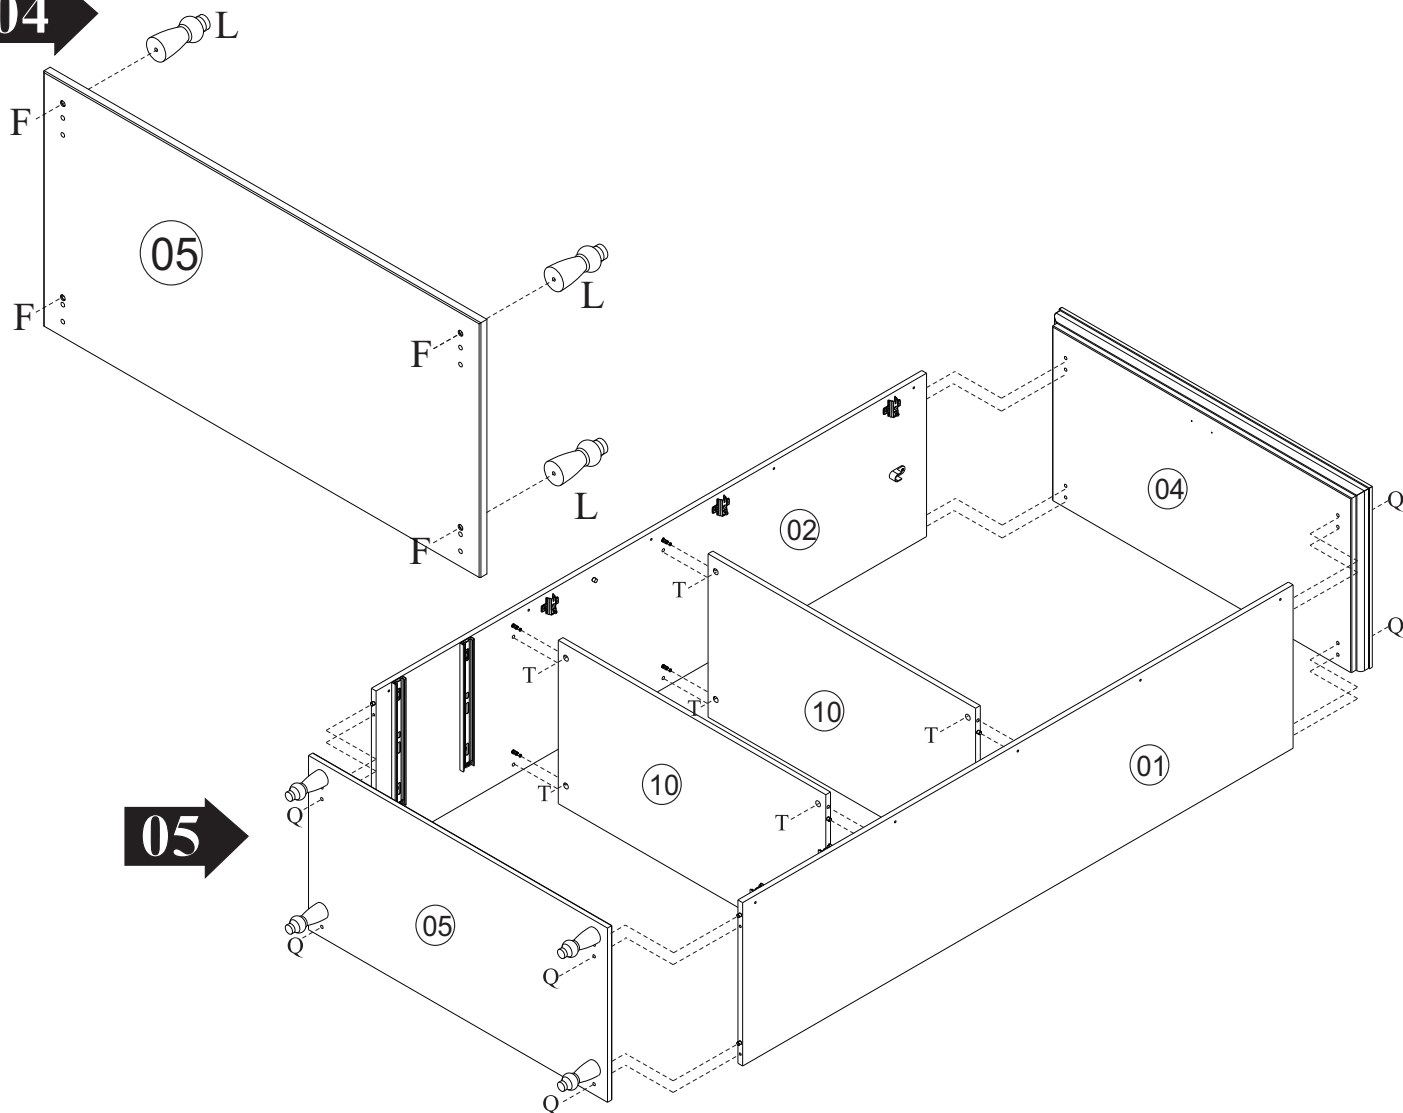


05 →


06

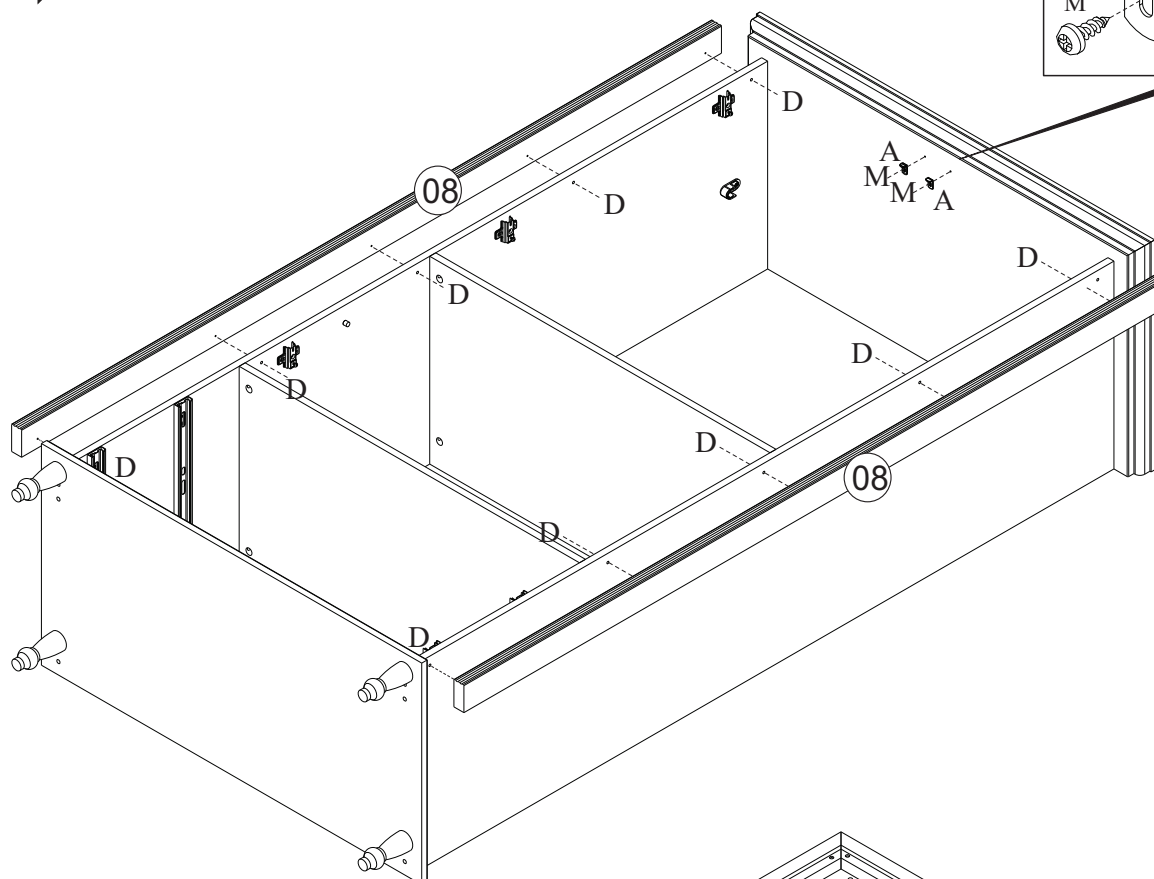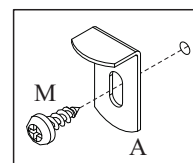


07

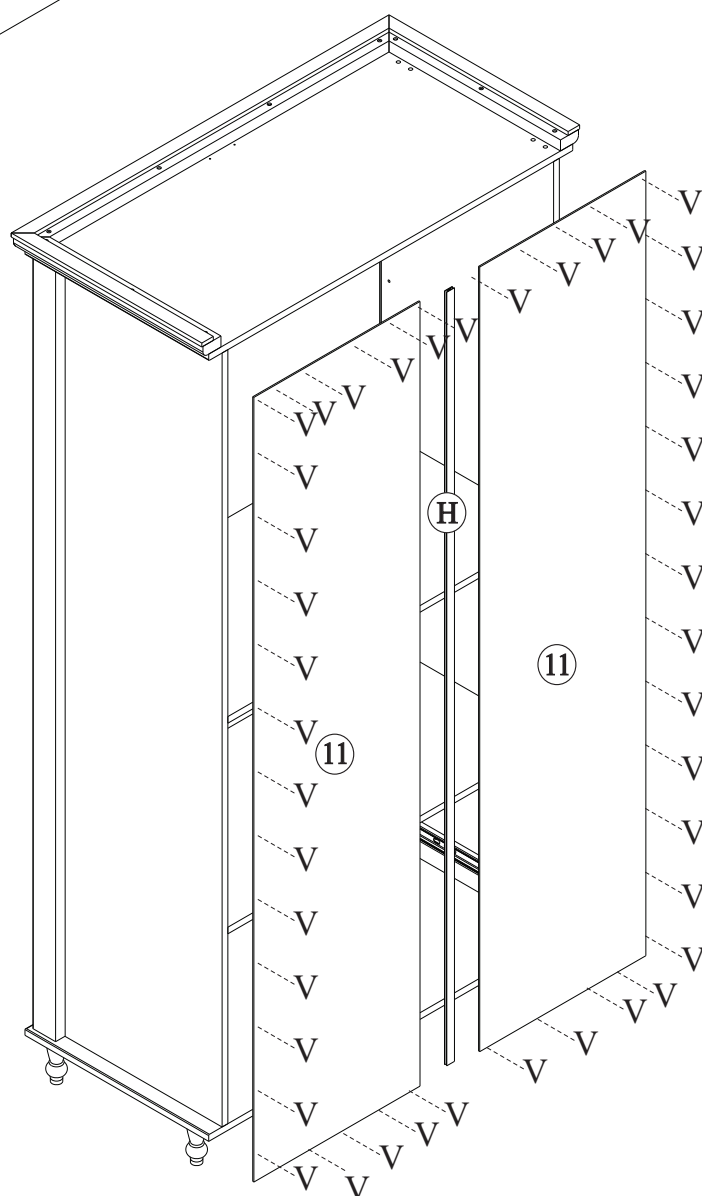


08

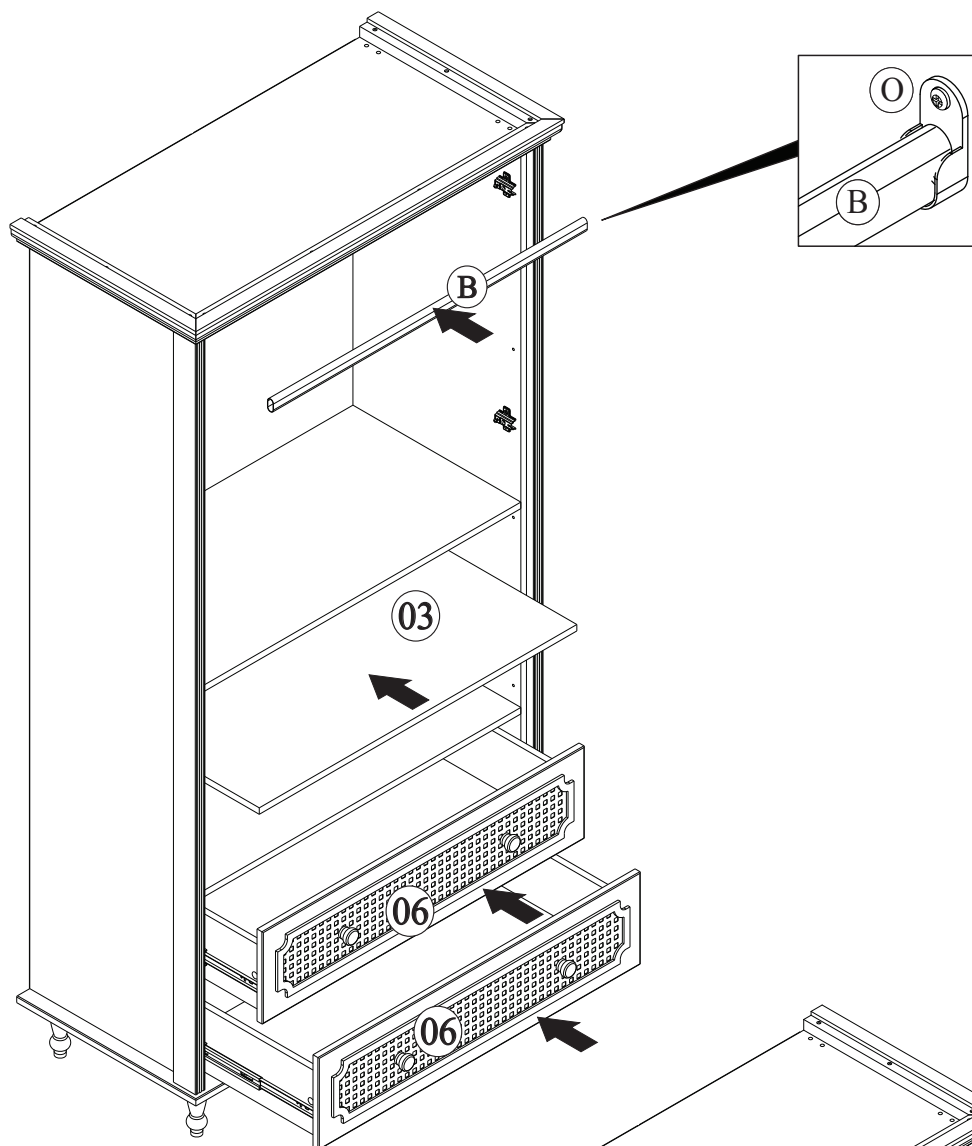


1º

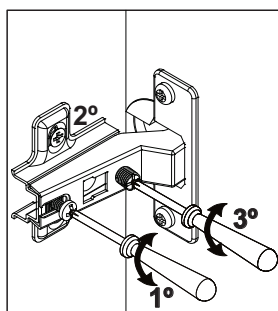

2º

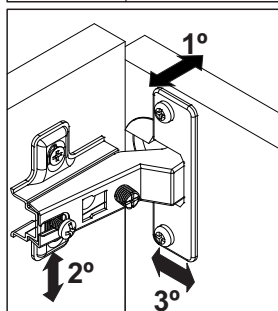

09

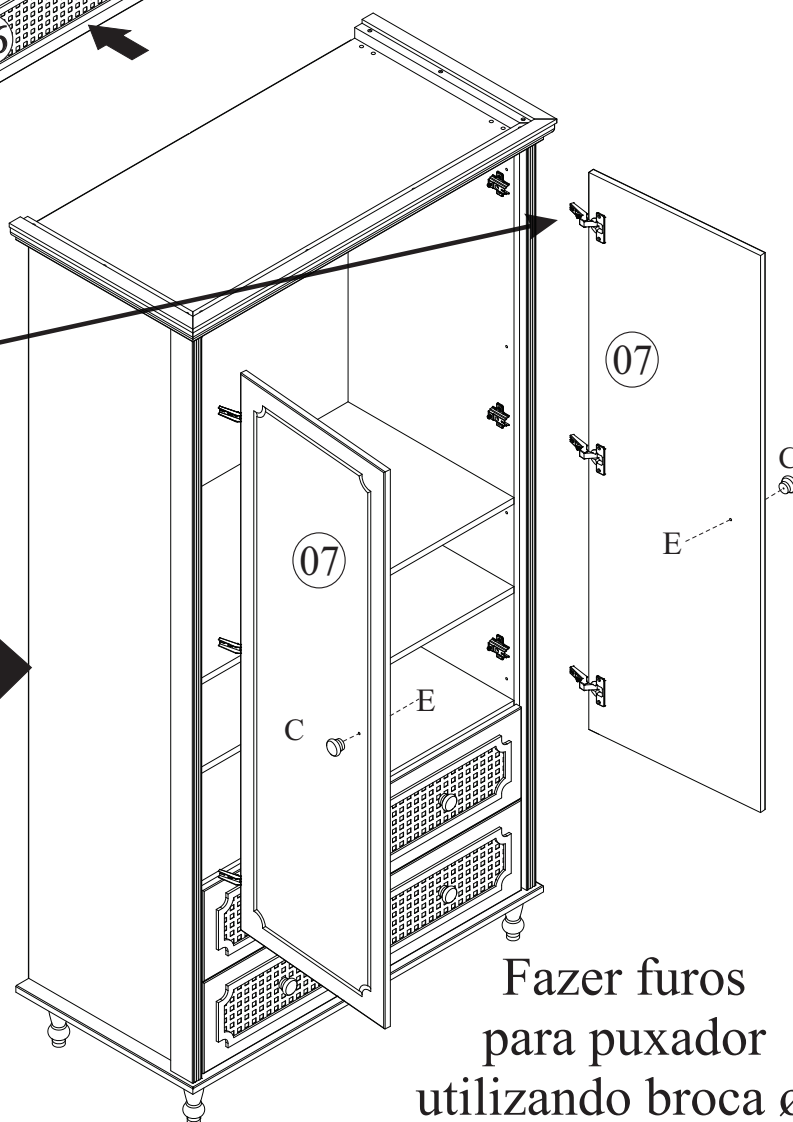

Fazer furos
para puxador
utilizando broca $\varnothing 5$