
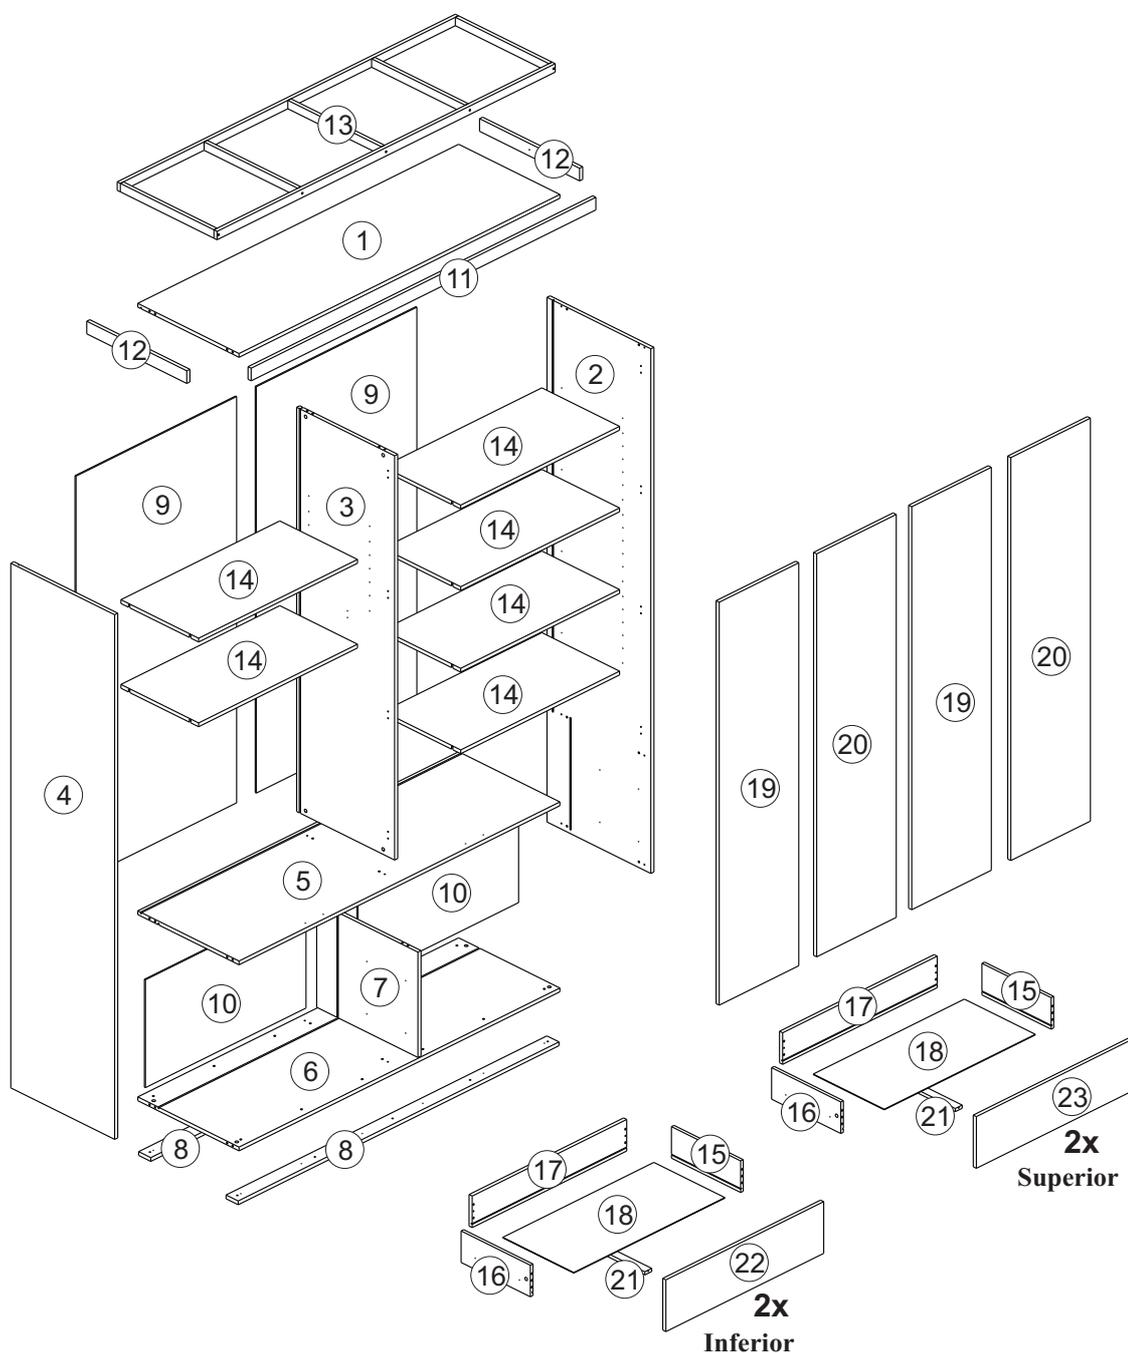
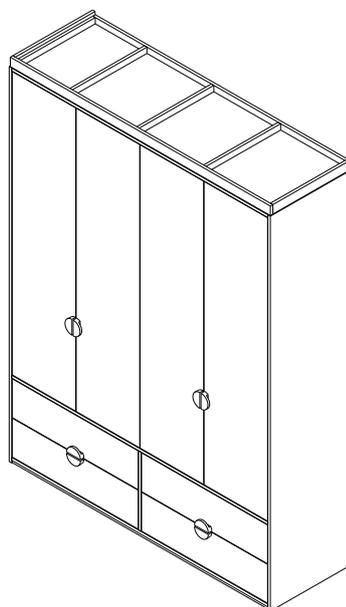











Armário 4 Portas
4 Gavetas Arcos
K511800F
K511800
K512200F
K512200
K512500F
K512500




A		8x30	52
B			28
C			28
D			24
E		4,0x45 Chata	08
F		Calço 3mm	08
G		4,5x30 Chata	12
H		3,5x30 Flangeado	16
I		3,5x25 Flangeado	08
J		4,0x12 Chata	32
K		4,0x12 Panela	44
L		4,0x16 Chata	24

M		6,0x14 Chata	32
N		Sapata 12x4	14
O			08
P			02
Q		Calço 12mm	08
R		Puxador	08
S		350mm Peças	08
T			16
U		Cabideiro	01
V		Tapa Furo ø19	08


Utilizar a régua abaixo para medir os componentes.

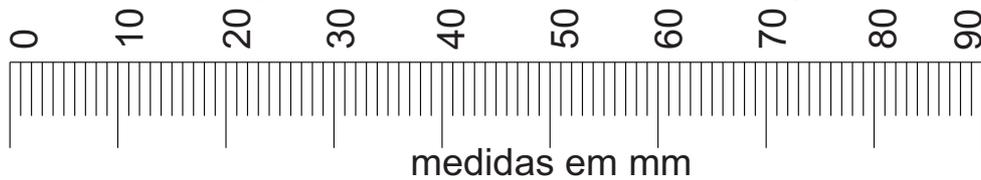


01 →

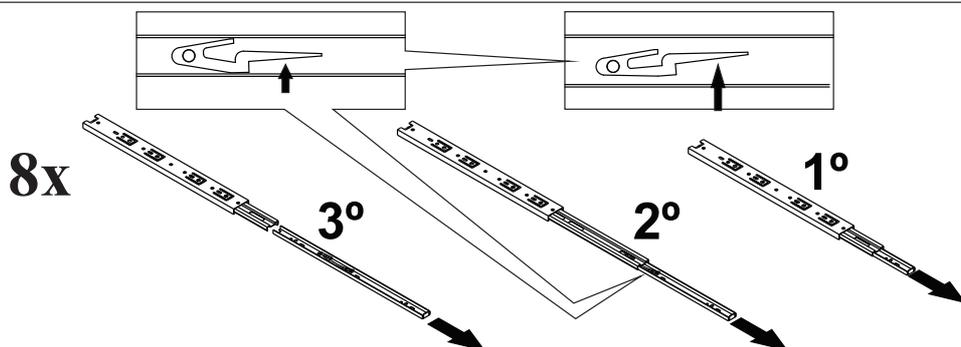


03 → **2x**

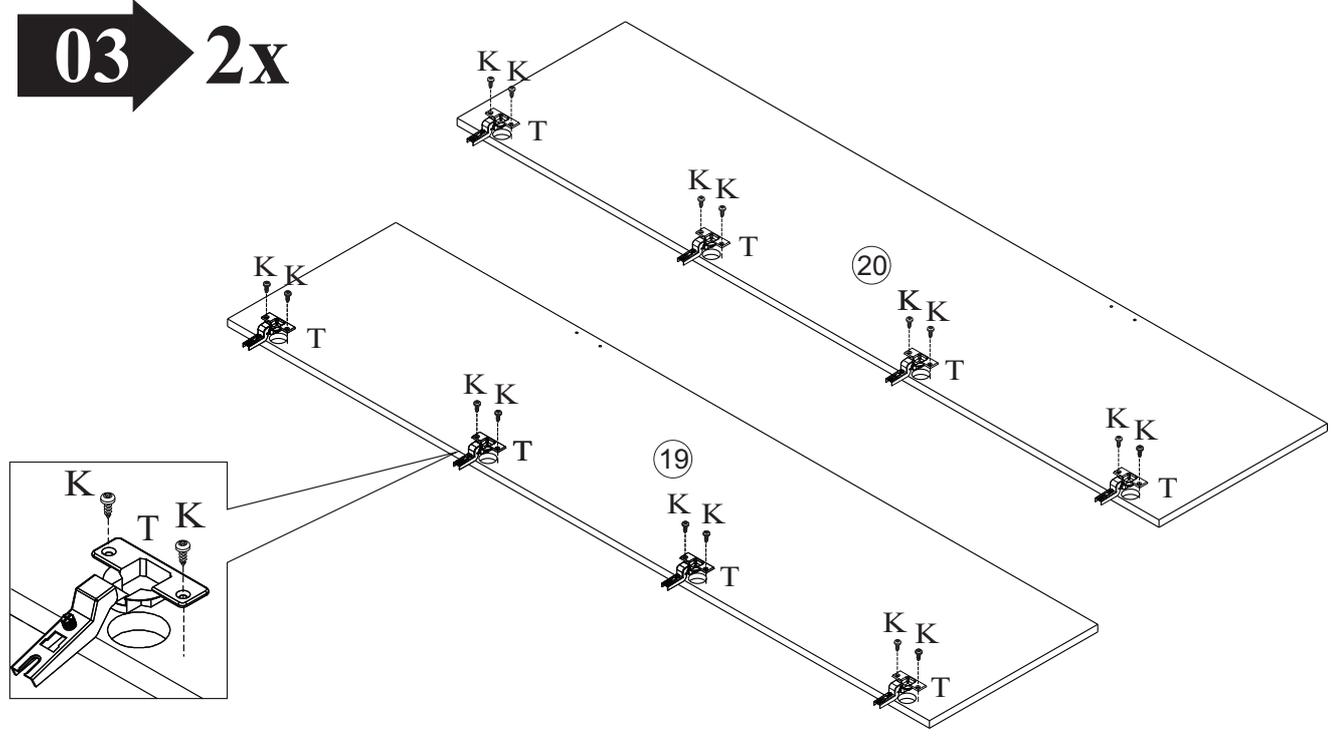


04 →

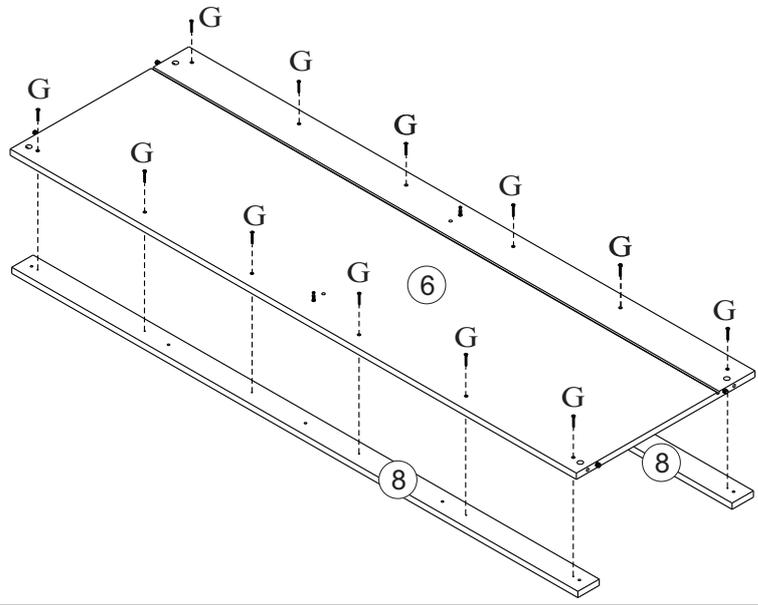


05 →

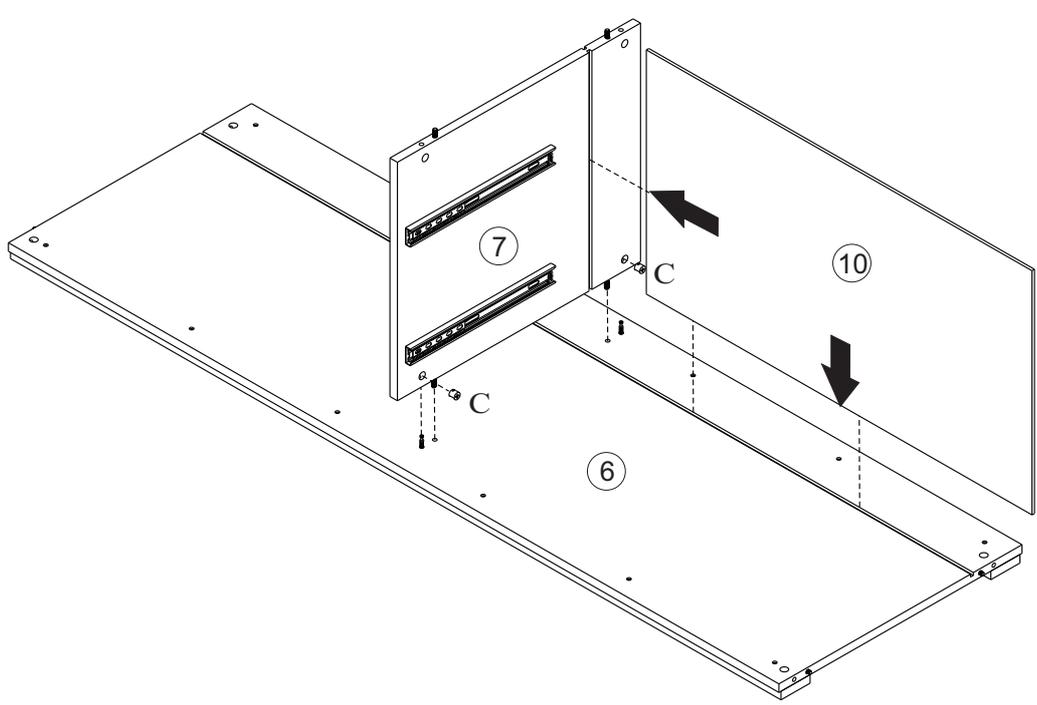


06

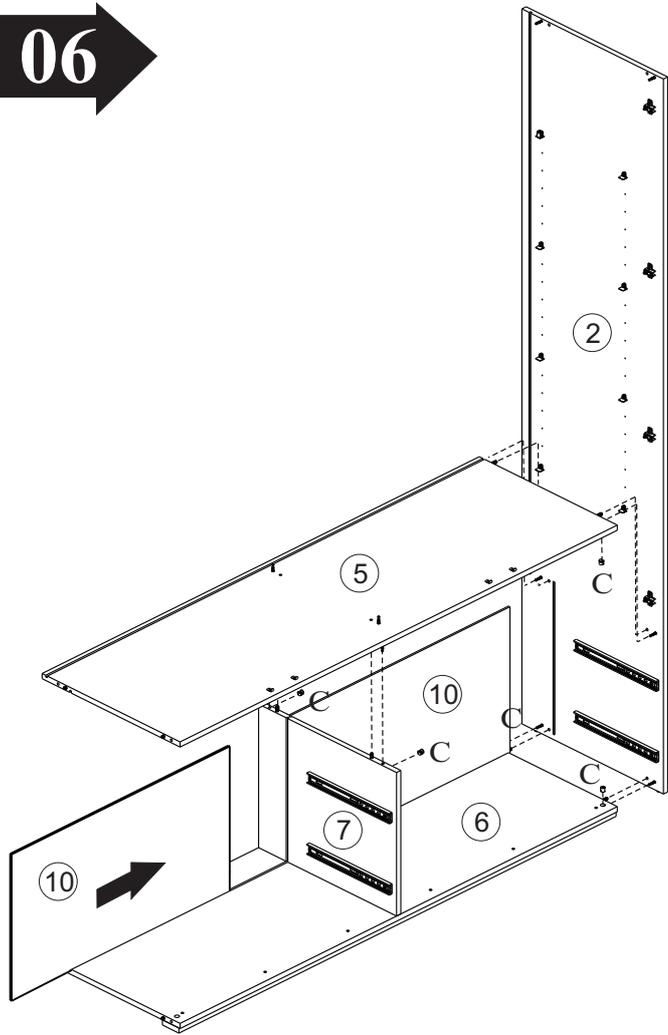



07

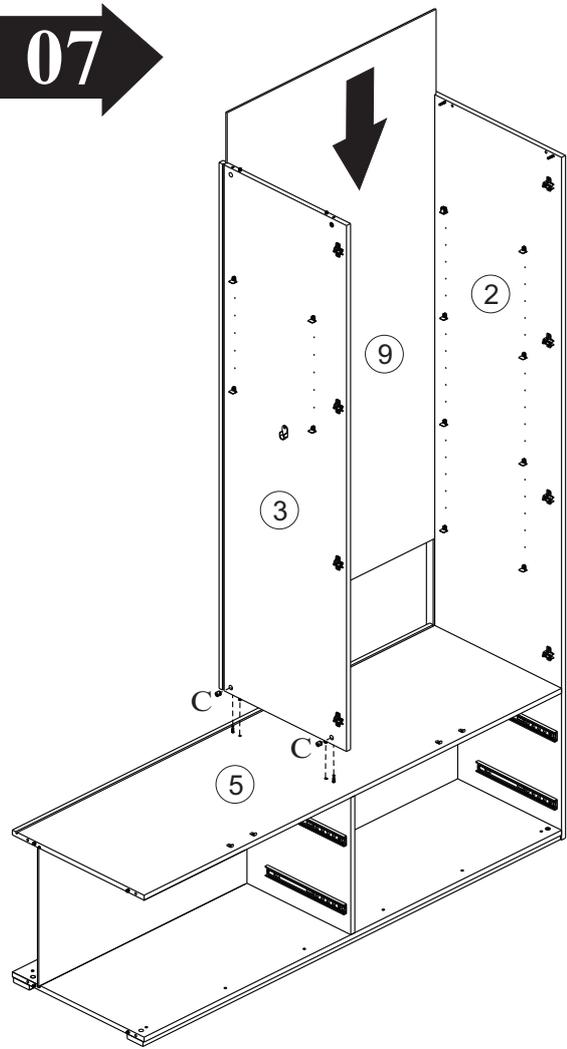



08

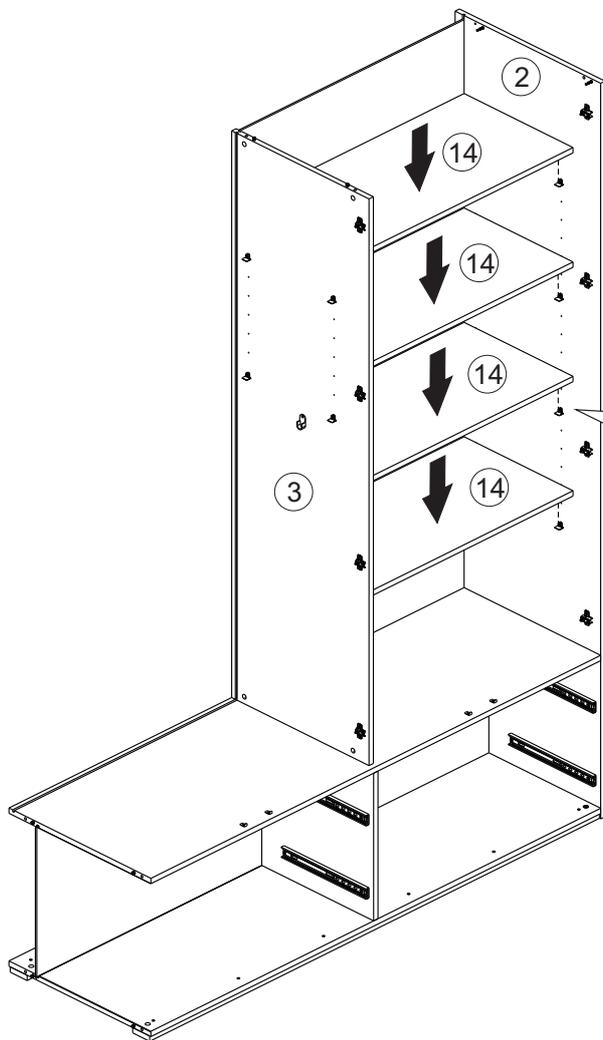

Colocar prateleira, observando o apoio no suporte prateleira, conforme detalhe.




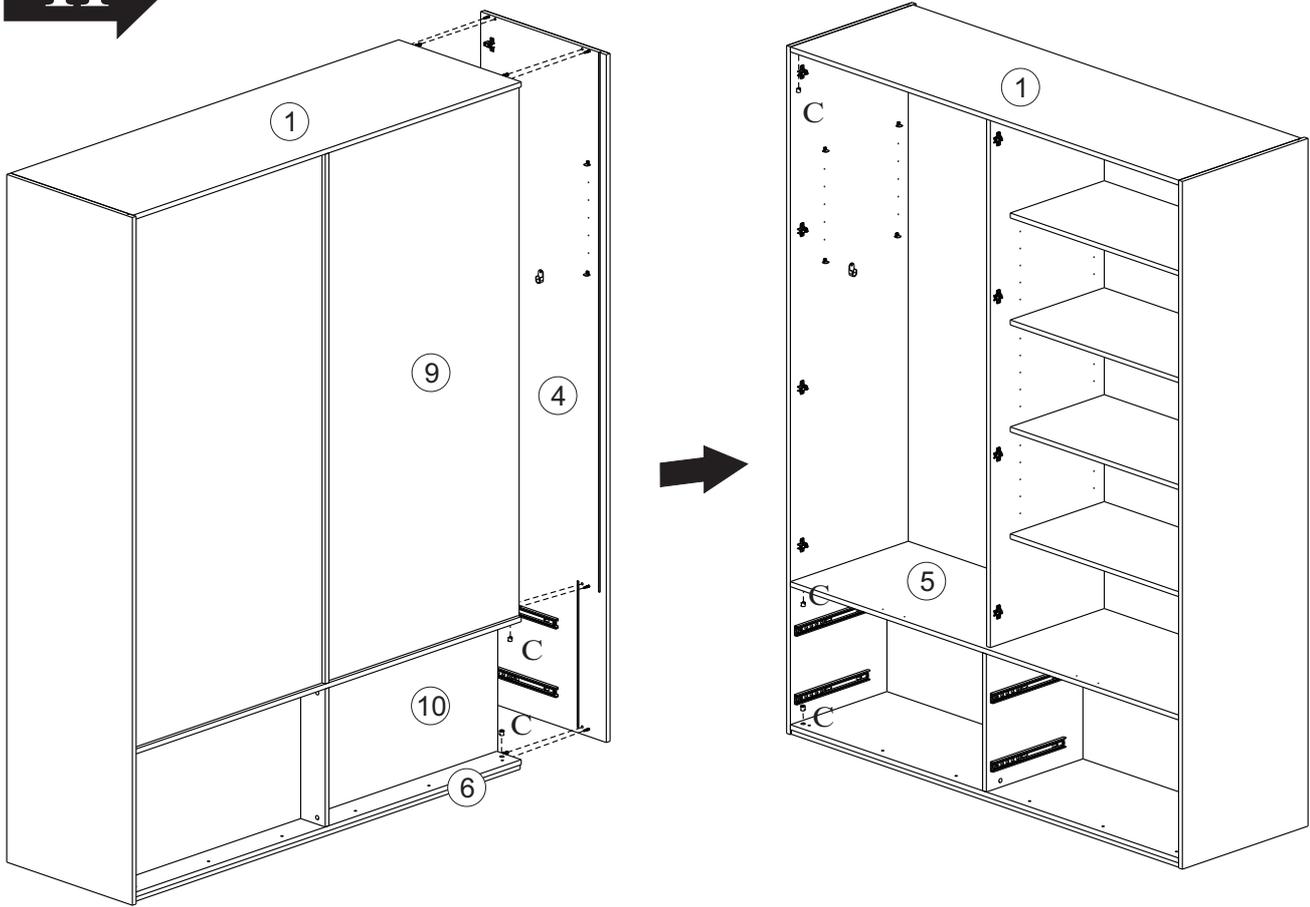
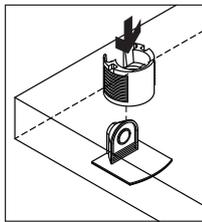
11**12**

Colocar prateleira, observando o apoio no suporte prateleira, conforme detalhe.


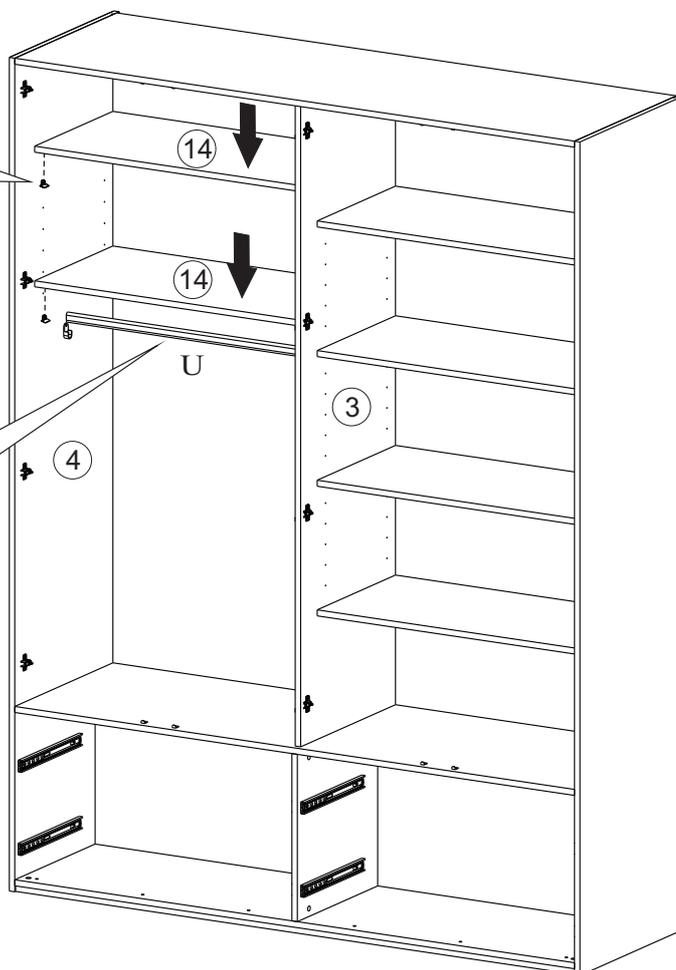
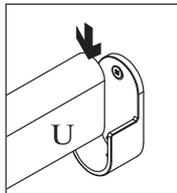


13**2x**






Inferior

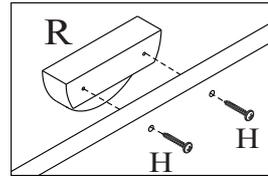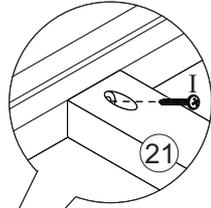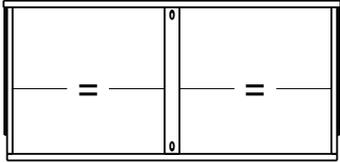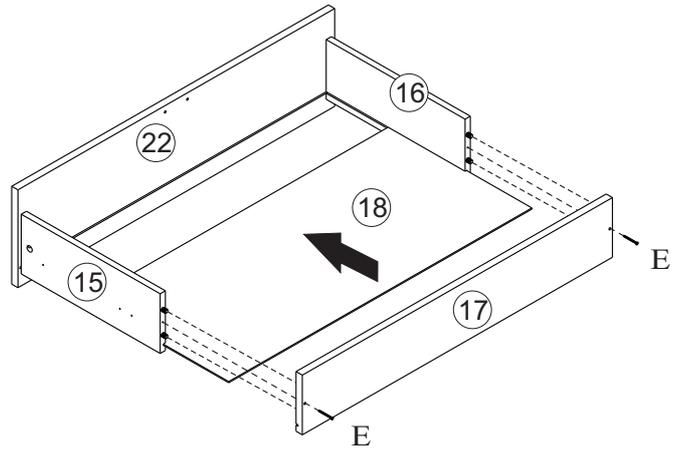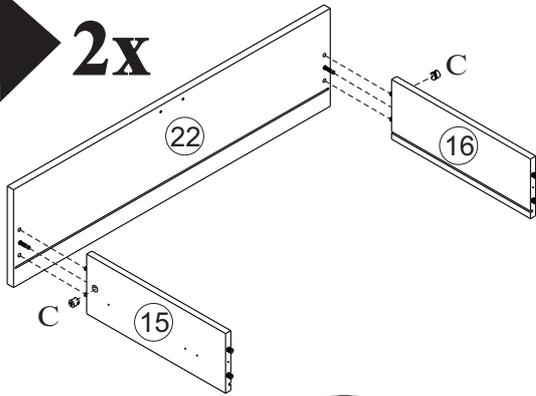




**FAZER O FURO
PARA O PUXADOR
UTILIZANDO
BROCA Ø5**

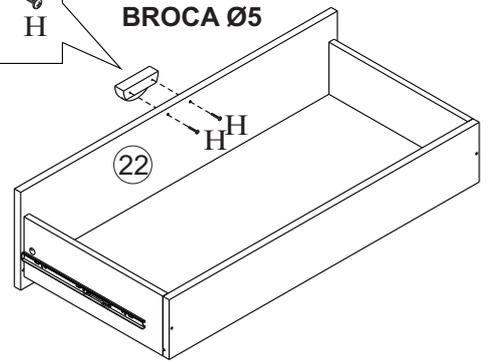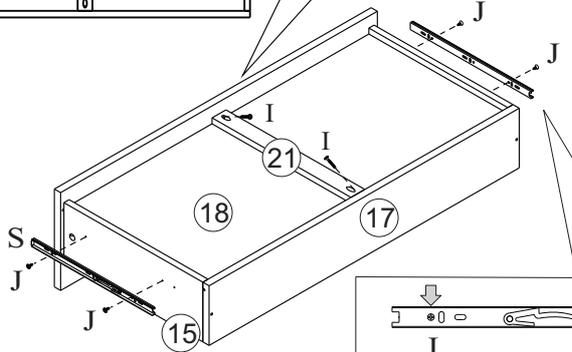**14****2x**


Superior

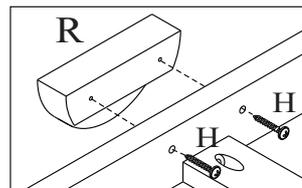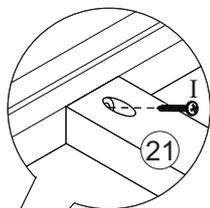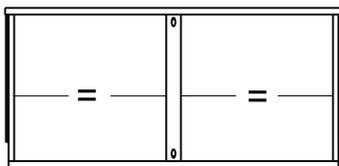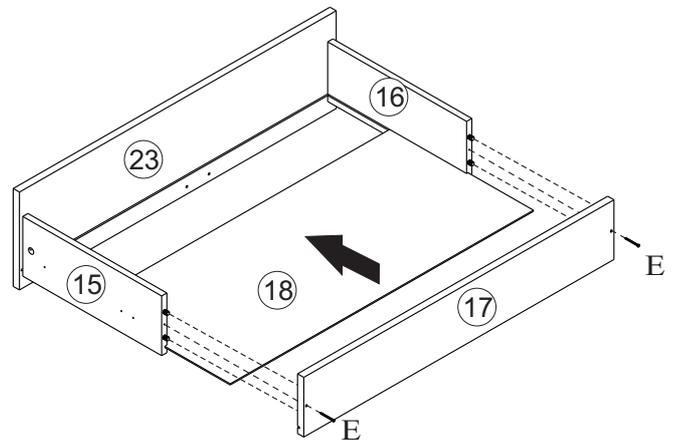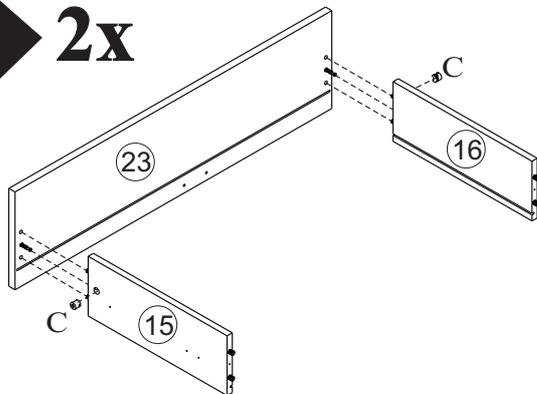






**FAZER O FURO
PARA O PUXADOR
UTILIZANDO
BROCA Ø5**

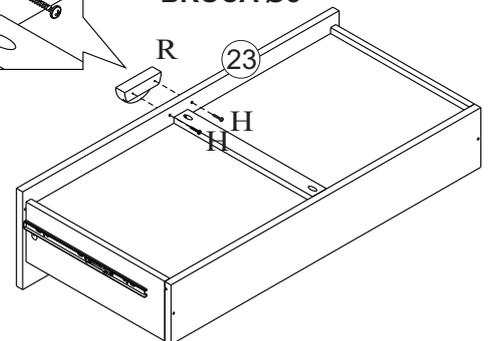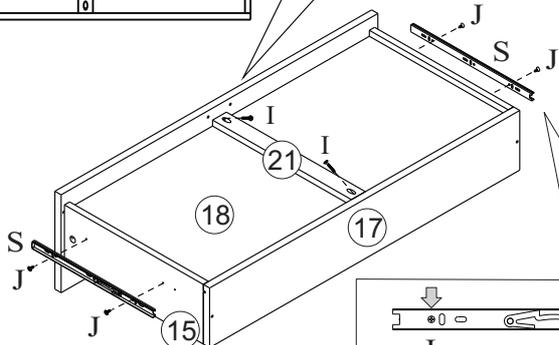

15





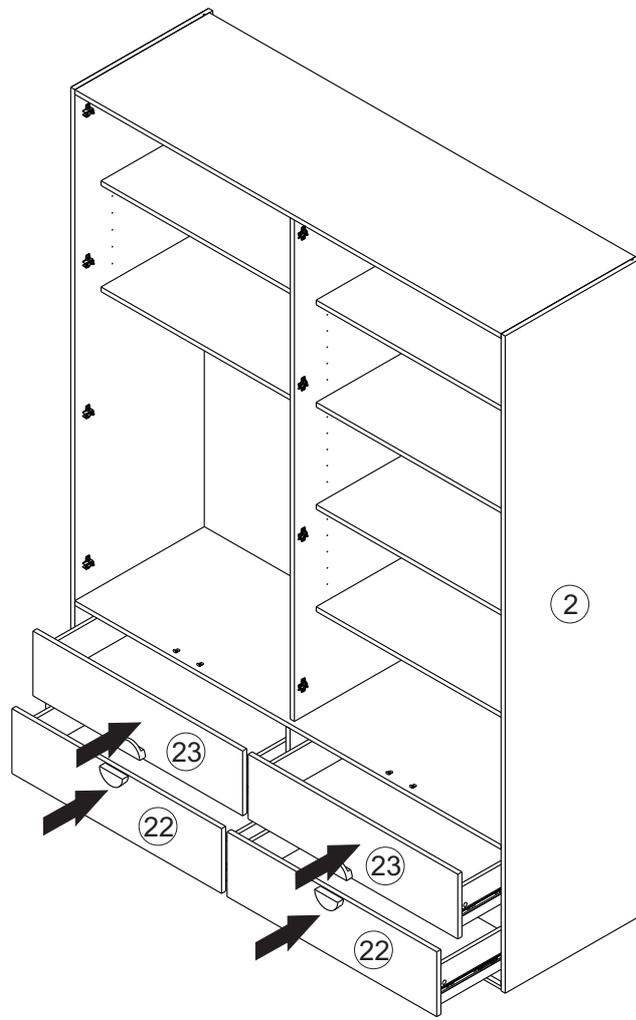


16

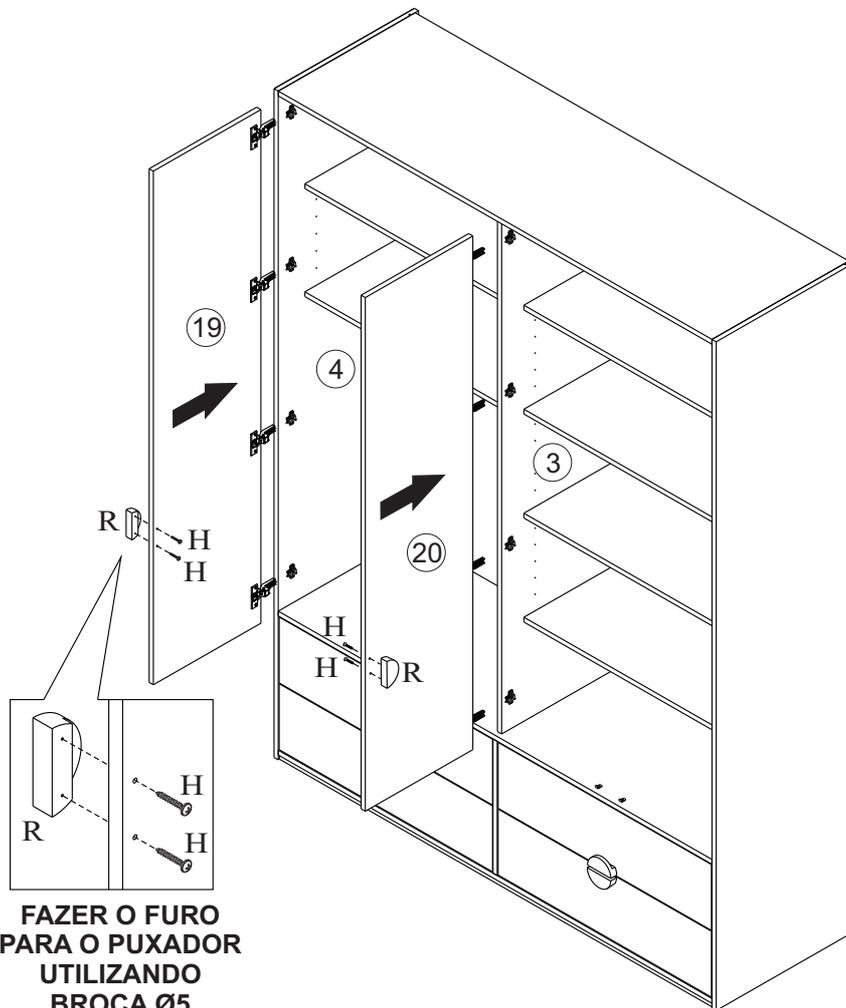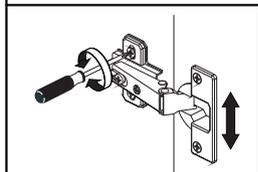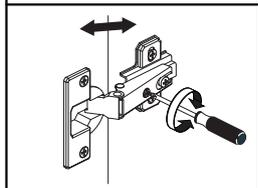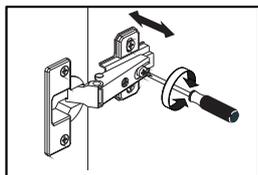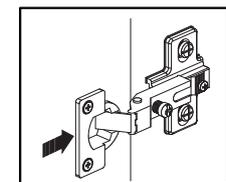


FAZER O FURO
PARA O PUXADOR
UTILIZANDO
BROCA Ø5


17

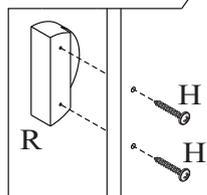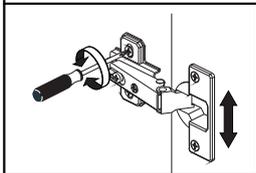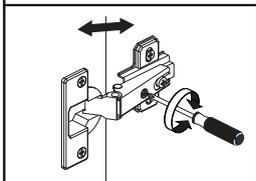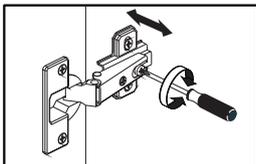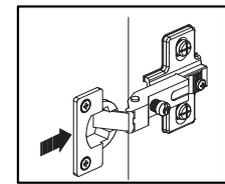


FAZER O FURO
PARA O PUXADOR
UTILIZANDO
BROCA Ø5

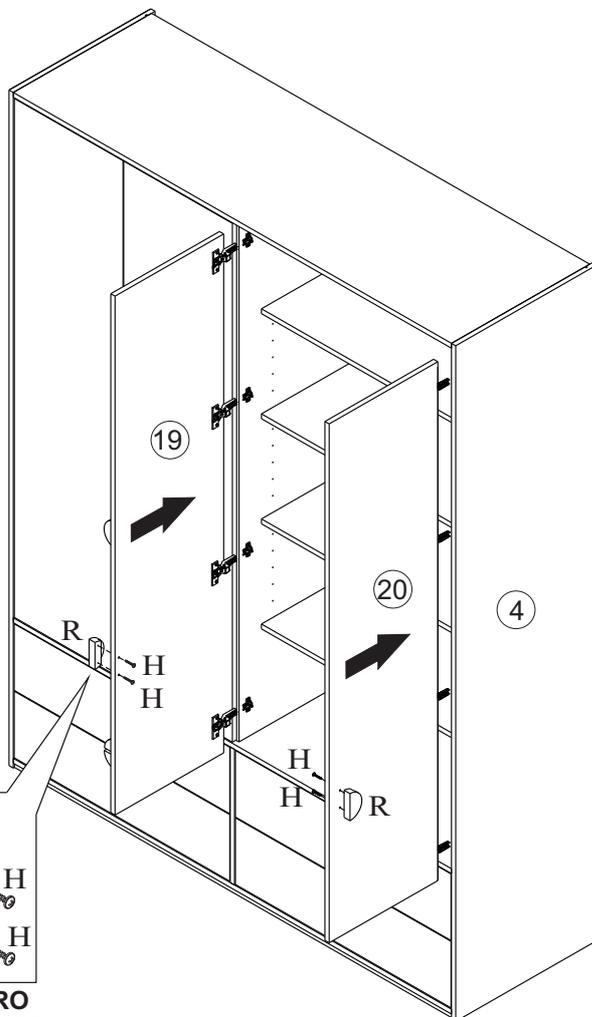


18

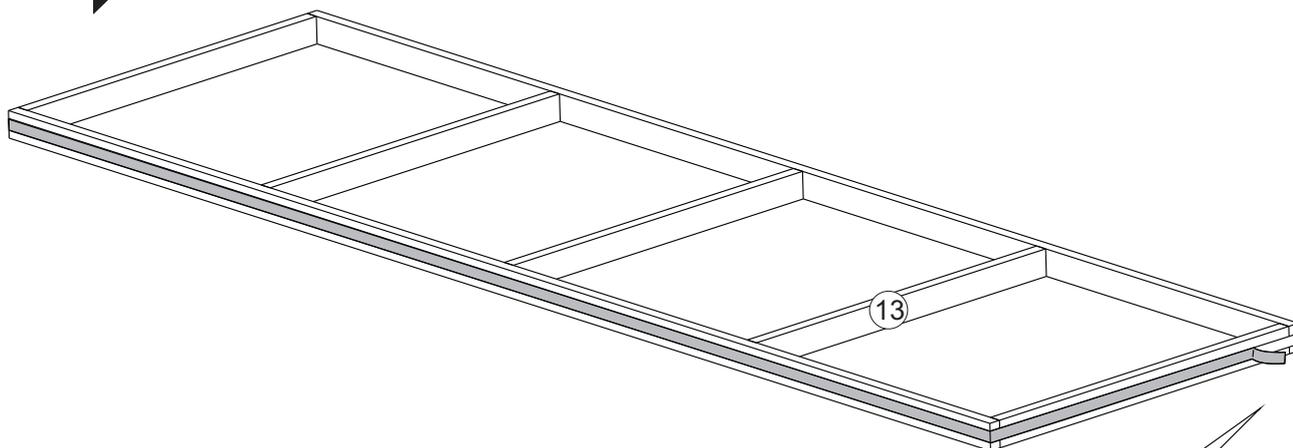

Tirar a proteção
da fita dupla face

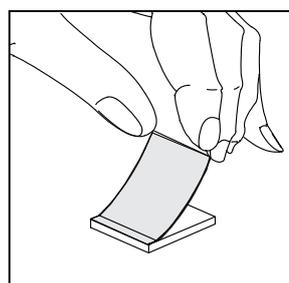

19

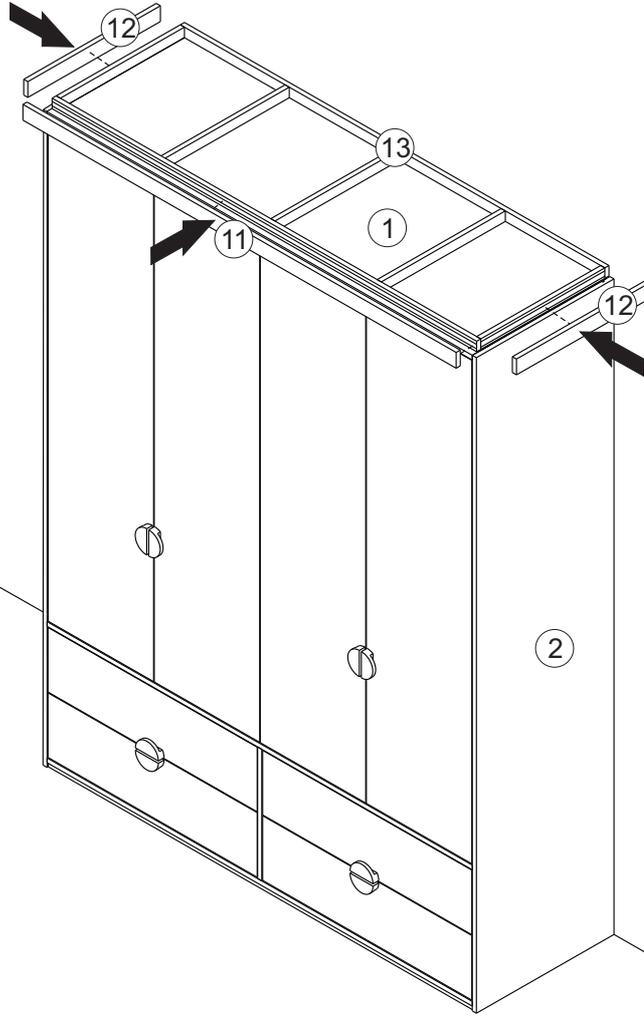

20

