


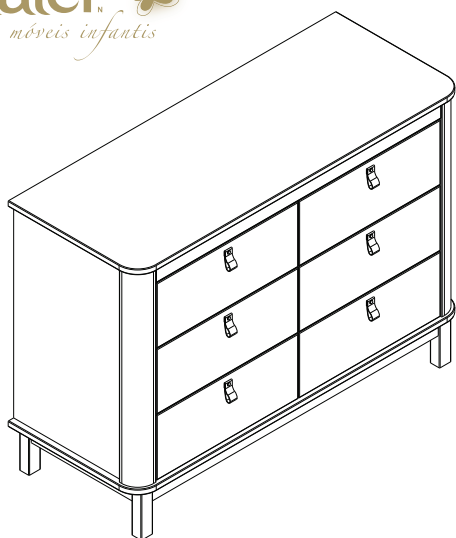


### Kit Anti Tombamento

|    |                      |    |
|----|----------------------|----|
| AA |                      | 02 |
| BB |                      | 01 |
| CC | <br>Tecido com 200mm | 01 |
| DD | <br>3,5x16 Flangeado | 01 |
| EE | <br>4,0x45 Chata     | 01 |


|   |                  |        |
|---|------------------|--------|
| A |                  | 02     |
| B |                  | 30     |
| C | <br>4,0x45       | 12     |
| D | <br>4,5x60       | 29     |
| E | <br>8x8          | 40     |
| F |                  | 02     |
| G | <br>350mm Peças  | 12 Pçs |
| H | <br>3,5x16       | 16     |
| I | <br>4,0x12 Chata | 48     |
| J | <br>8x30         | 63     |
| K |                  | 30     |
| L |                  | 05     |
| M |                  | 02     |

|   |                      |    |
|---|----------------------|----|
| N | <br>4,0x12 Painela   | 04 |
| O | <br>3,5x25 Flangeado | 08 |
| P | <br>8,0x50           | 06 |
| Q | <br>7,0x50 Cab13     | 08 |
| R |                      | 04 |
| S |                      | 06 |
| T |                      | 01 |
| U |                      | 06 |
| V | <br>Puxador          | 06 |

| Nº Peça | Nome da Peça            | Qtde |
|---------|-------------------------|------|
| 1       | Tampo                   | 01   |
| 2       | Lateral Direita         | 01   |
| 3       | Lateral Esquerda        | 01   |
| 4       | Distanciador Corrediça  | 04   |
| 5       | Divisória               | 01   |
| 6       | Fundo                   | 01   |
| 7       | Traseiro                | 02   |
| 8       | Travessa Superior       | 01   |
| 9       | Frente de Gaveta        | 06   |
| 10      | Lateral Gaveta Direita  | 06   |
| 11      | Lateral Gaveta Esquerda | 06   |
| 12      | Traseiro Gaveta         | 06   |
| 13      | Fundo Gaveta            | 06   |
| 14      | Travessa Inferior Base  | 02   |
| 15      | Travessa Lateral Base   | 02   |
| 16      | Pé Frontal Direito      | 01   |
| 17      | Pé Frontal Esquerdo     | 01   |
| 18      | Pé Central              | 01   |
| 19      | Pé                      | 04   |
| 20      | Traseiro Furado         | 01   |

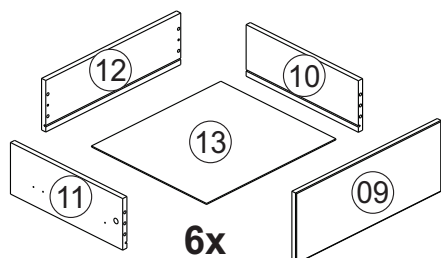

6x

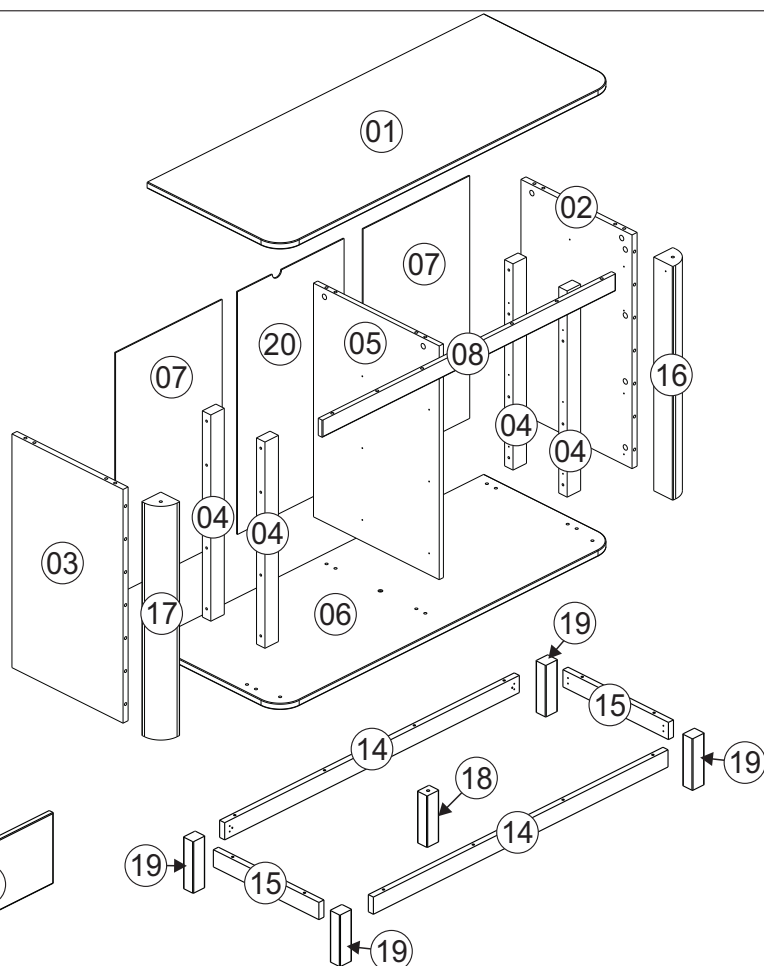

**01**


**12x**

**3º**




**2º**

**1º**



**02**

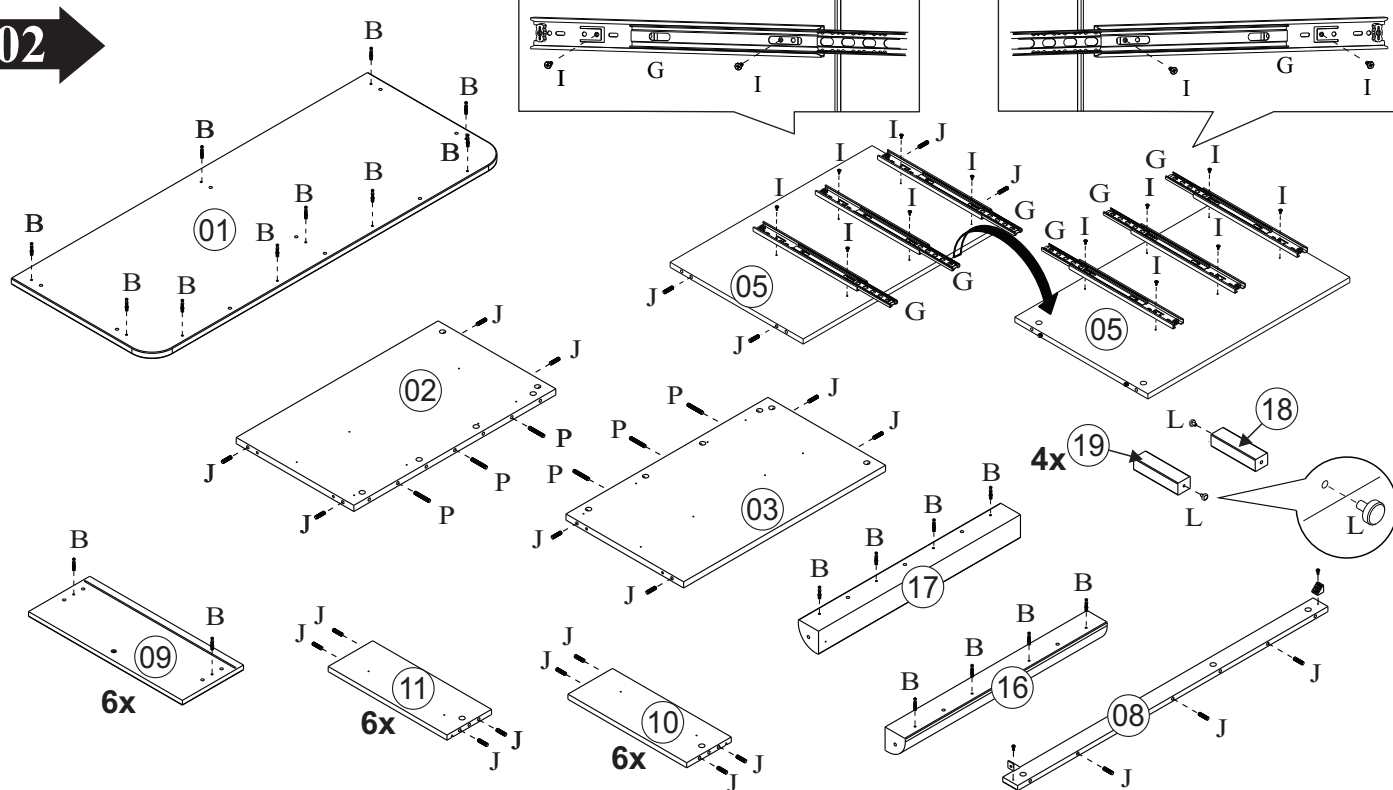

**03** **6x**

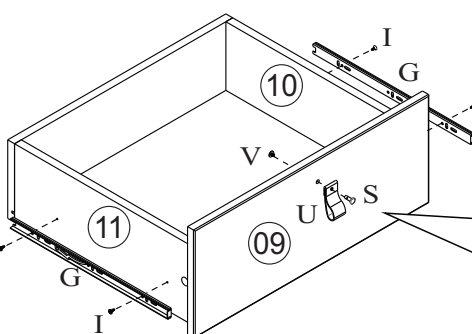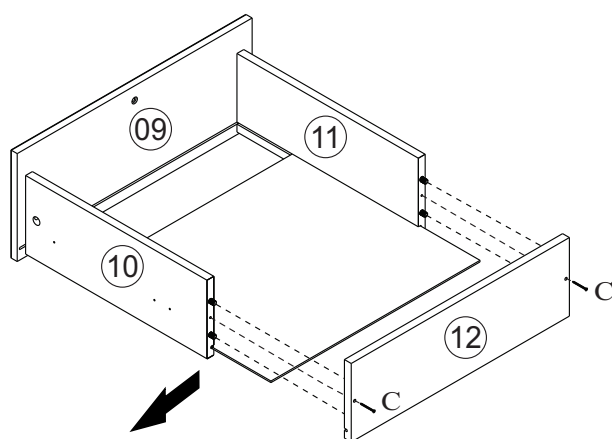
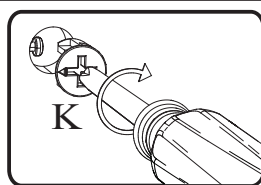


**FAZER O FURO  
PARA O PUXADOR  
UTILIZANDO  
BROCA Ø6**





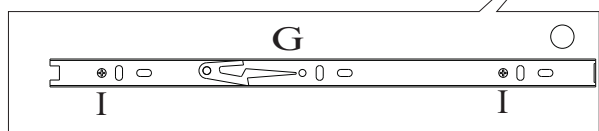
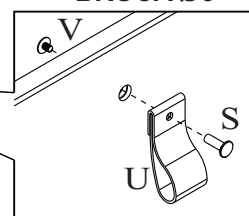





07

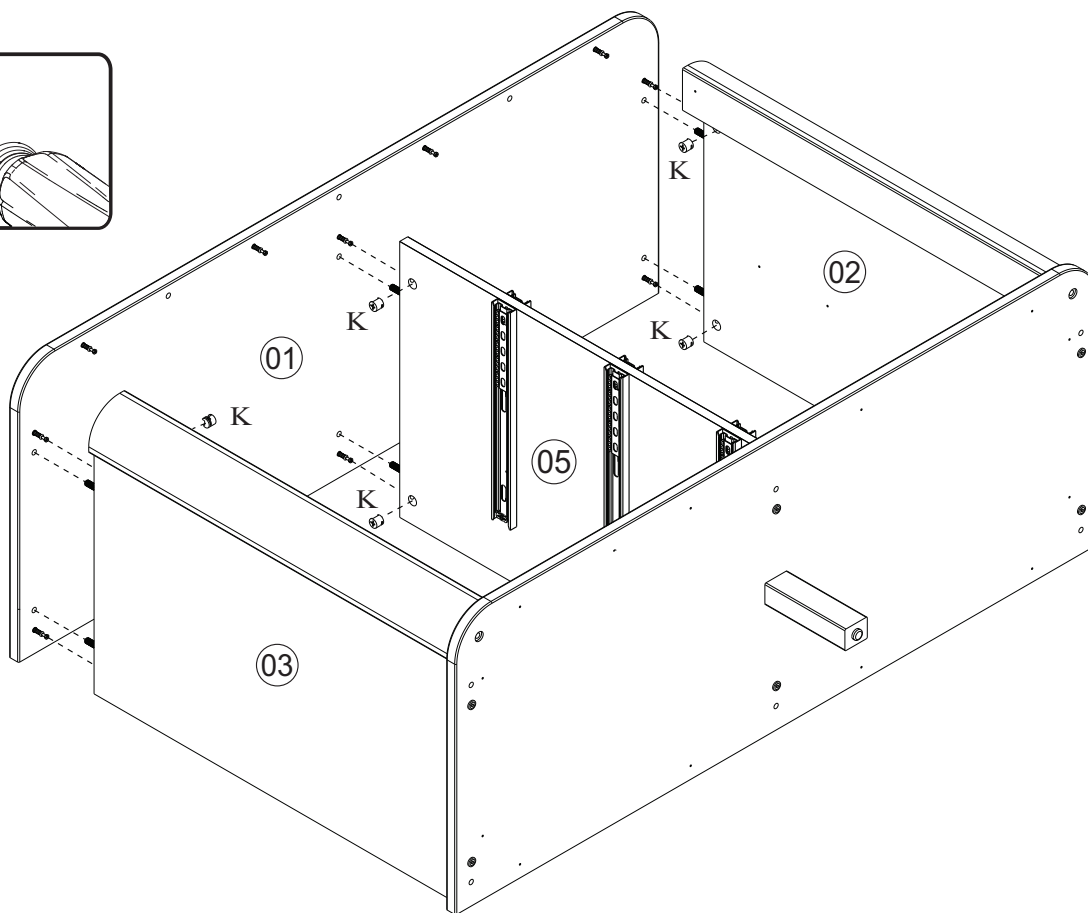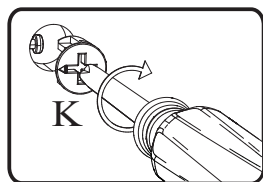


08

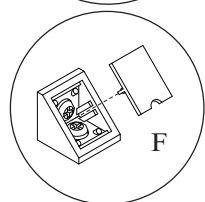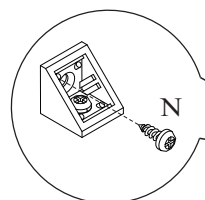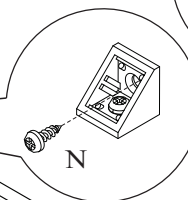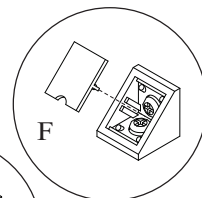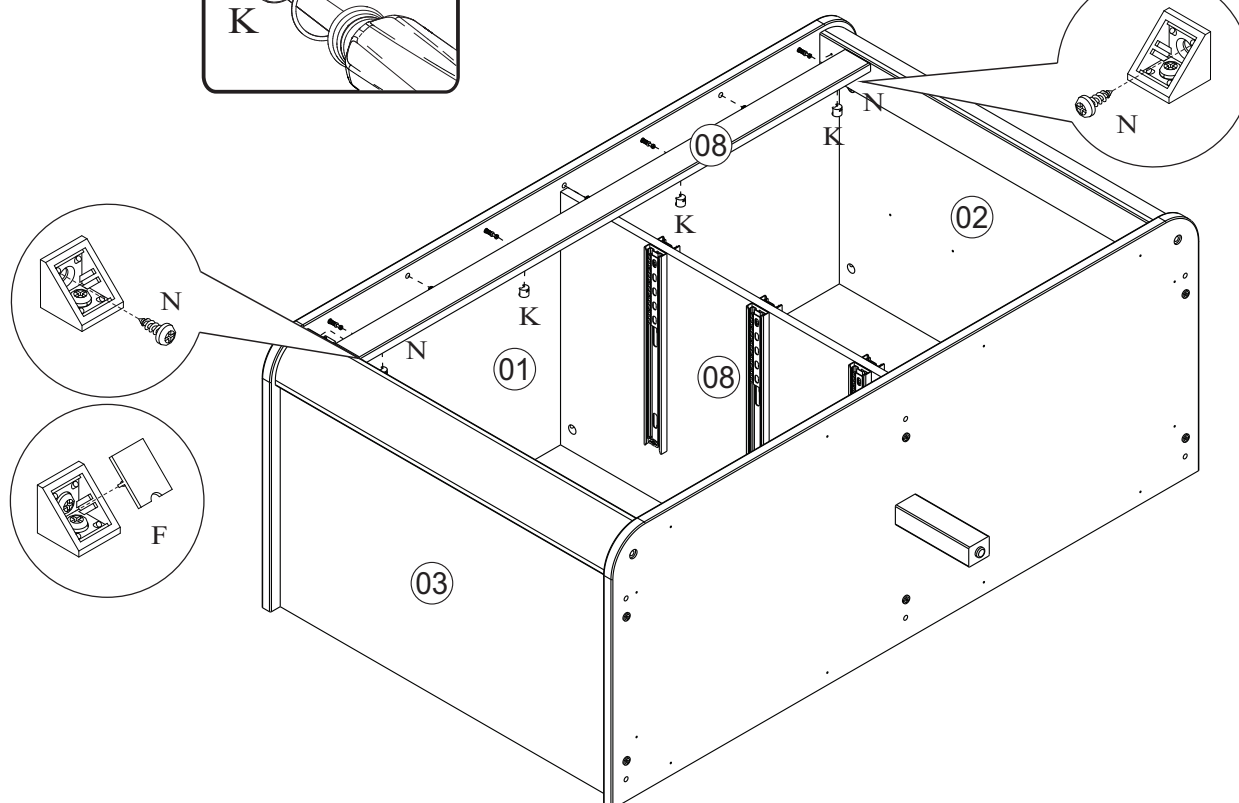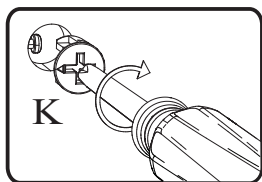


09

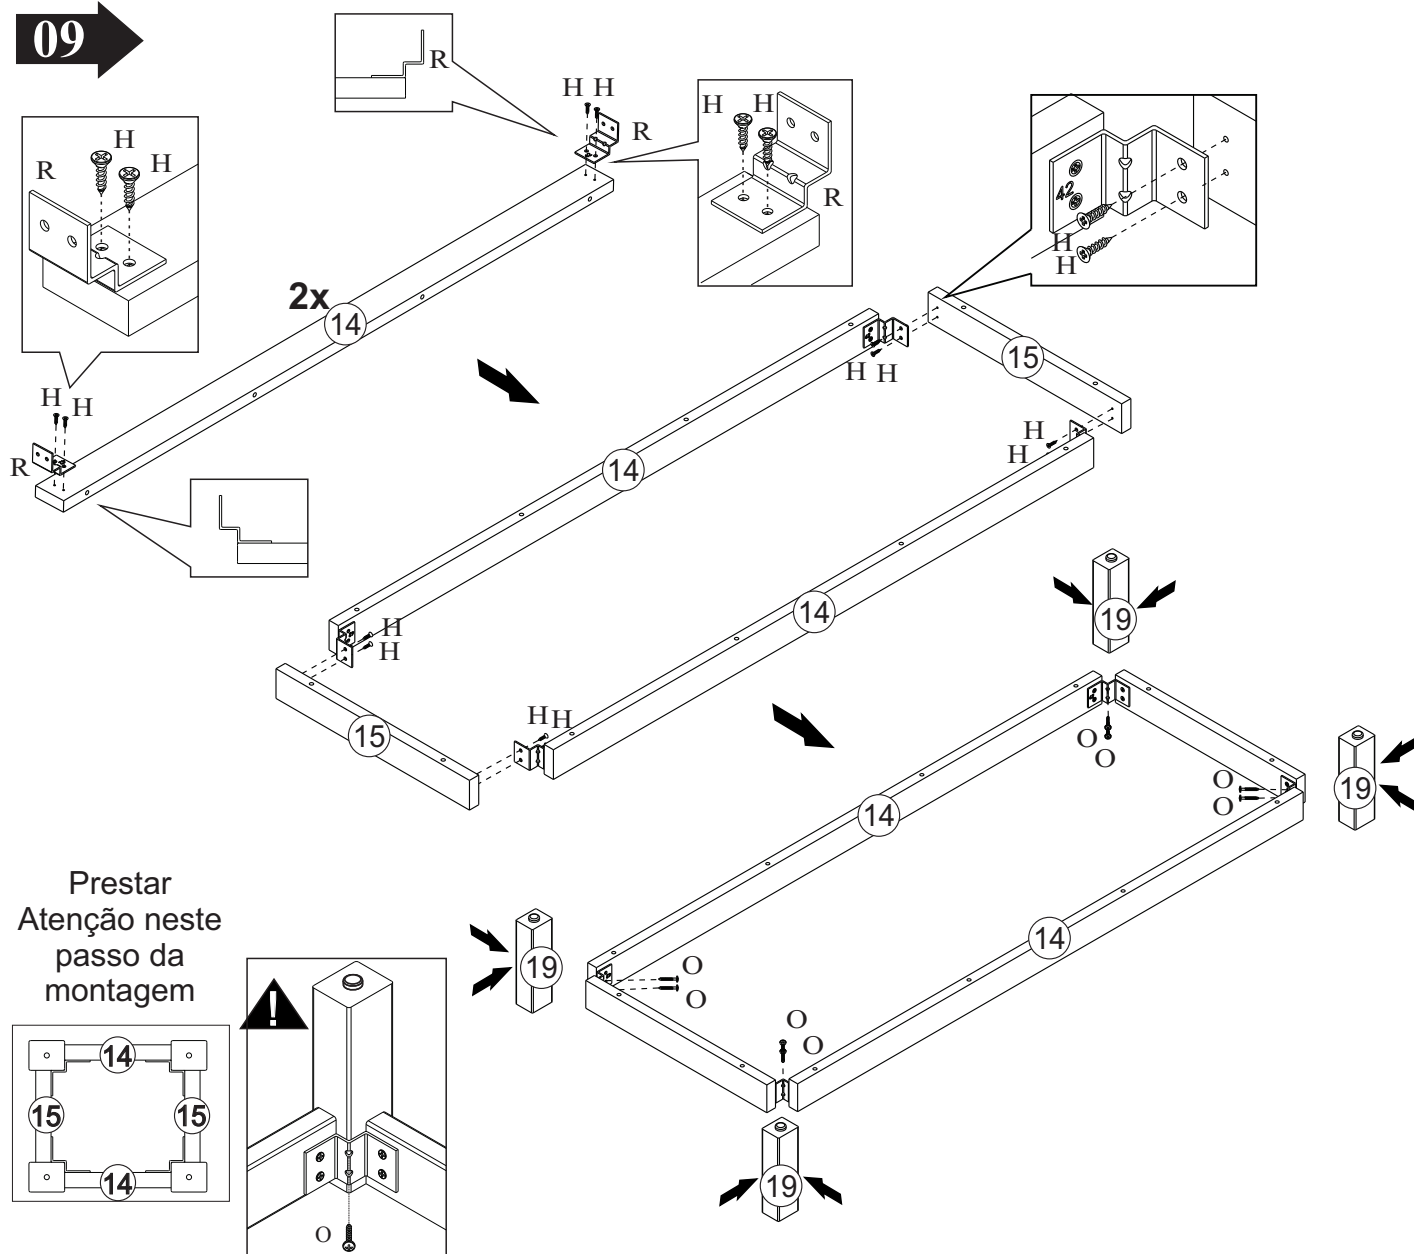


10

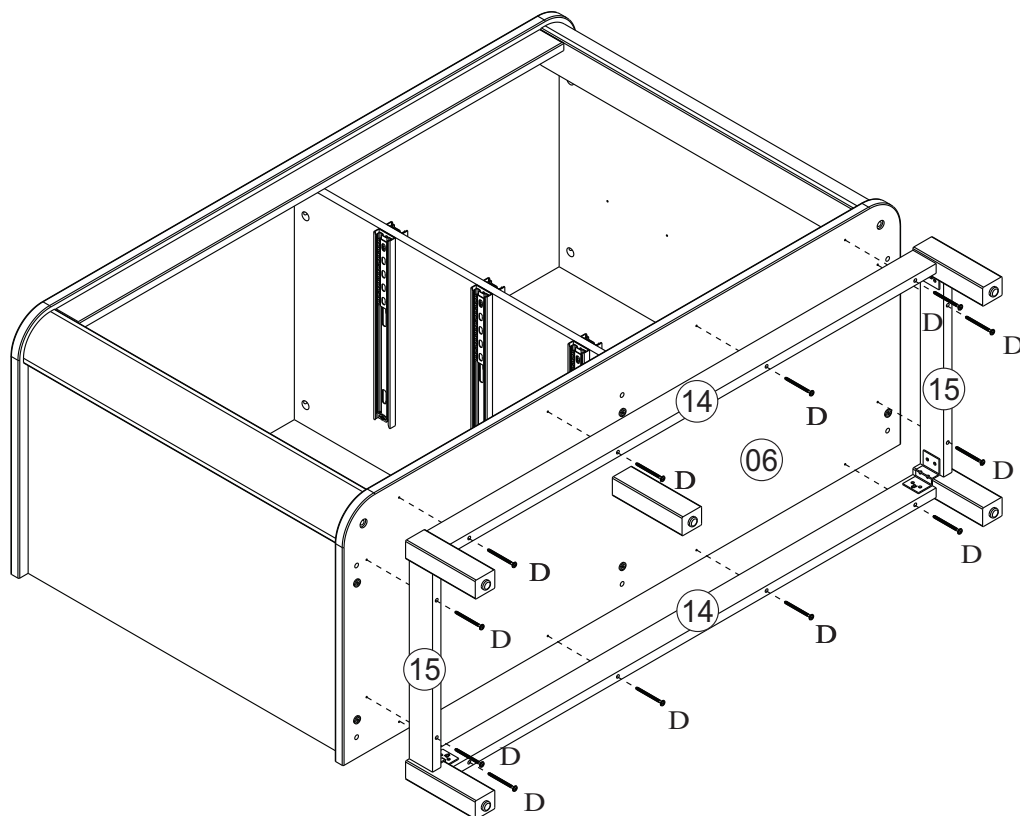


11

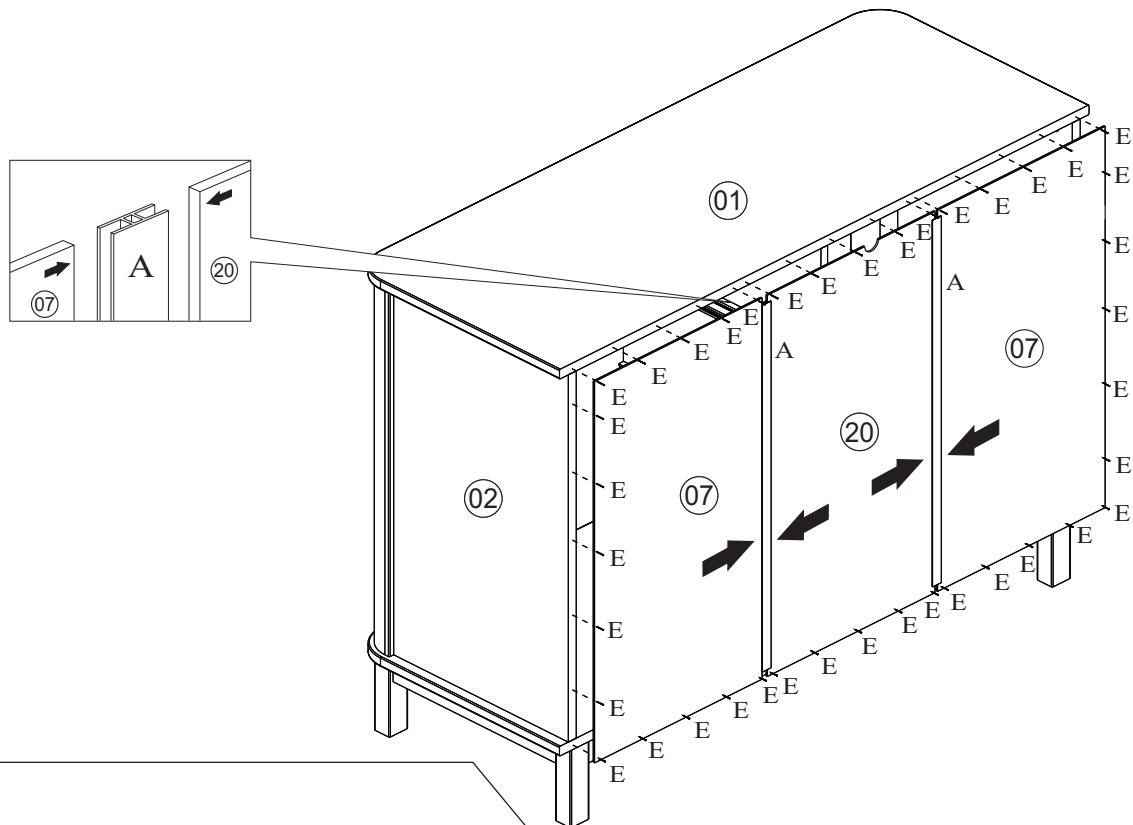


12

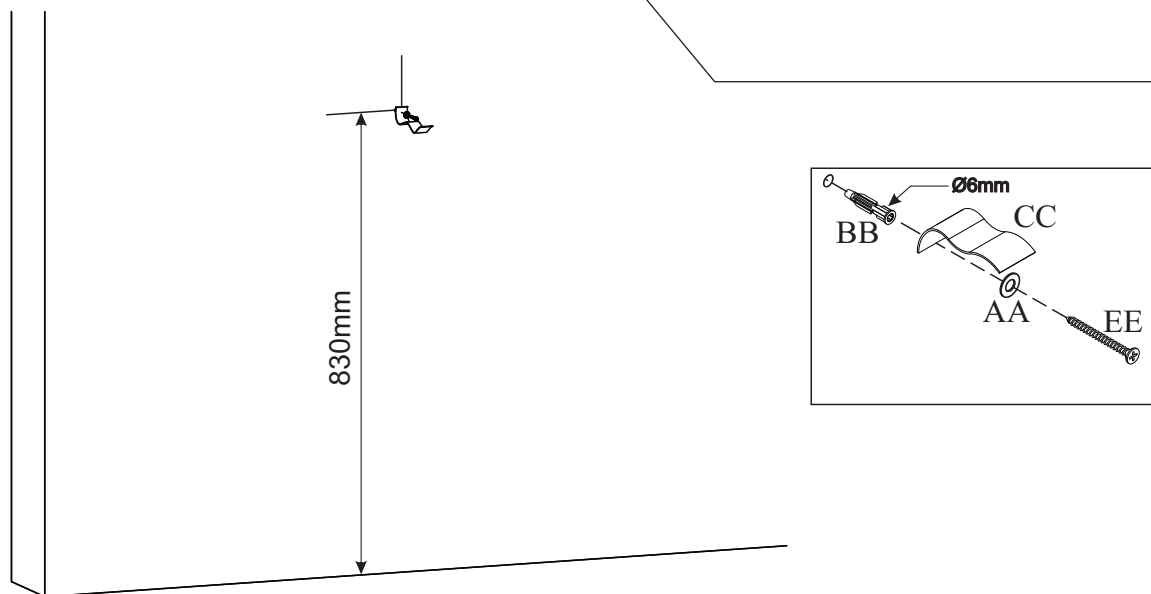


13

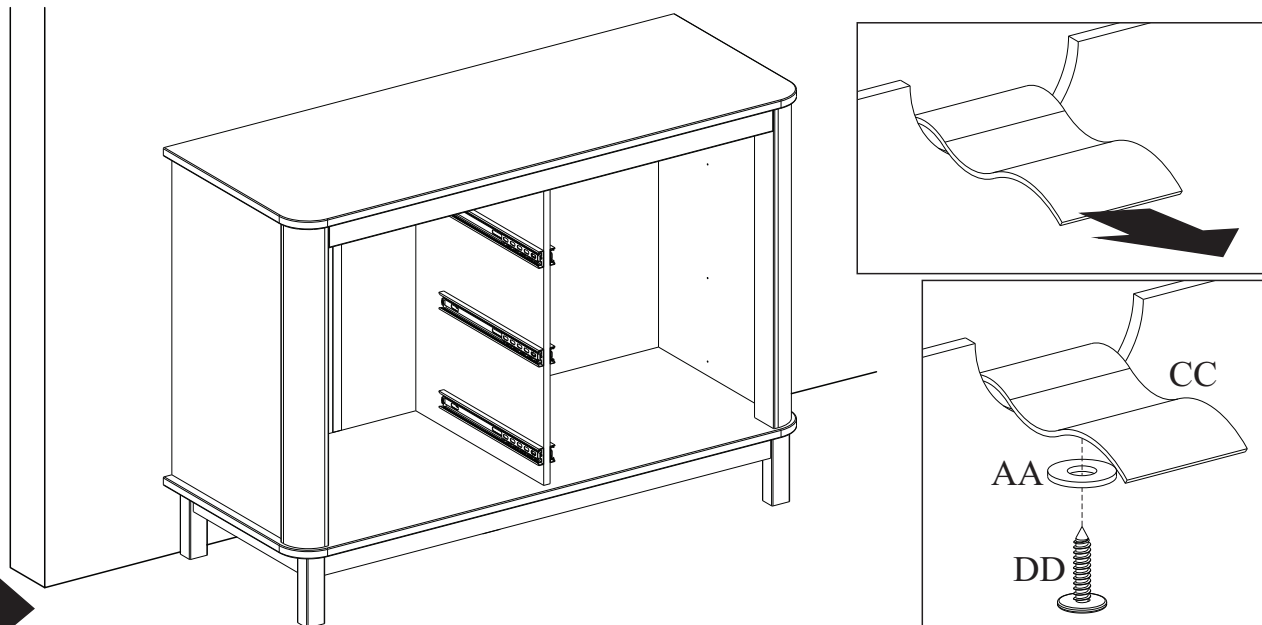

14

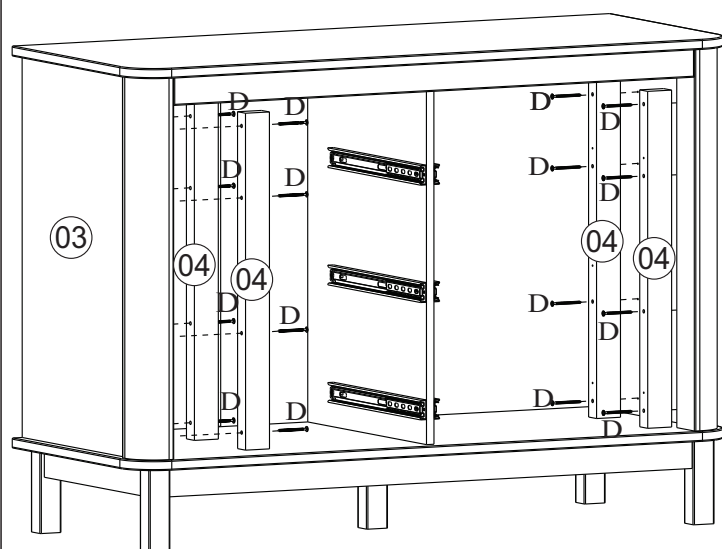

15

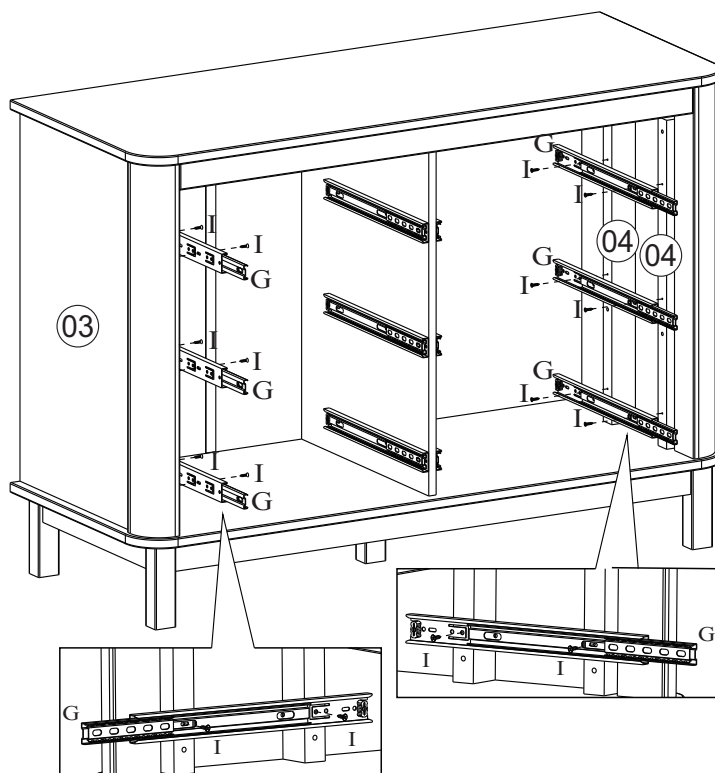

16

